

Please read completely before setting up your Fast Shade Instant Canopy

It is your responsibility to read and save these instructions before attempting to set up your Fast Shade Instant Canopy. We would also like to suggest that you follow these safety precautions, care and maintenance tips when using your Fast Shade:

1. Never set up or continue to use in any rain, wind or storm conditions, especially lightning storms. Damage can occur to your Fast Shade and put you and others in potential danger.
2. We suggest that you take your time in order to avoid bending the frame or pinching your fingers or hands while opening and closing the frame.
3. Avoid setting up your Fast Shade on steep inclines.
4. Always use the provided stakes to secure your Fast Shade to the ground unless you set up on concrete or asphalt.
5. Do not use your Fast Shade for permanent shelter. It was designed for temporary use only.
6. Keep your Fast Shade canopy away from heat and flames at all times. Do not barbecue or build fires under your Fast Shade.
7. Never leave your Fast Shade unattended.
8. Hand wash the canopy using only mild soap and water. Never use harsh detergents, abrasives or bleach. Do not machine wash.
9. Never fold or store your Fast Shade when it is wet or damp. Let it dry completely to avoid mildew.
10. **ALWAYS USE COMMON SENSE.**

Quick and Easy Set-Up!



FAST SHADE



10x10 Steel Frame Set-Up and Safety Instructions



Celina Tent Inc.

5373 State Route 29, Celina, Ohio 45822 | www.GetTent.com

Phone: 419-586-3610 Toll Free: 1-866-438-8368 Fax: 419-584-0949

CELINA

A Division of



WARNING:

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

Before proceeding with the assembly of your Fast Shade Instant Canopy, please make yourself familiar with its parts and how they make your Fast Shade function

The following parts are inside your Fast Shade box:

1 Assembled Frame

1 Wheeled Bag (Optional)

4 Anchor Stakes

STEP 1

Place your Fast Shade frame in the center of the set-up area. With a partner on the opposite side of the frame, hold onto the two outer legs and lift slightly for clearance. Take a few steps back until you extend the frame to a full arm's length - approx 4 feet (figure A). To improve the opening and closing action of your Fast SHADE® you may spray a small amount of silicone lubricant on the legs.

STEP 2

Place the canopy over the top of the frame (Fig. B). Unfold and align the corners and peak seams with the frame. Hook and loop fasteners will align with the hook and loop fastener material at the top of each leg. (Fig. C)

STEP 3

Grab the bottom of the center frame section where it forms a "V". Lift slightly and slowly walk backward until the frame is fully extended (Fig. D&E). Be sure to avoid pinching your hands or fingers.

STEP 4

At each corner, hold the leg on the frame with one hand and lift the leg slider. It should lock into place with a click with the spring-loaded lever / pin going into the hole. (Fig F & G)

STEP 5

Secure remaining hook and loop straps to the frame (Fig H). The adjustable legs offer multiple height levels. Simply lift a leg and adjust the telescopic inner leg up or down to until the pin pops into place. Repeat on the other legs. Use stakes (for soil) or weight plates (for hard surfaces) to secure the canopy frame to the ground.

COMPLETED



(Shown with optional Backdrop and Rail Skirts)



The Steel frame has an adjustable center post that can be adjusted using the center mounted crank. Use this to adjust the tension of the top to remove any slack in the top. Do not tension too much as damage to the seams can result.



Take Down

Note: The canopy top may remain in place for easier subsequent set-up. However, to prolong the life of the fabric, we recommend that you remove the top when storing your canopy.

WARNING: Before storing your Fast Shade, be sure the canopy top is not wet or damp. Storing your Fast Shade while it is even slightly damp may cause mildew. Allow your canopy to completely dry before taking it down. If you must take down your Fast Shade while the canopy is damp, remove the canopy top from the frame by unfastening the hook and loop straps. Fold up the frame and lay the canopy top down, fully open, as soon as possible and allow it to dry completely.

STEP 1

Remove stakes from ground or weight plates from legs. Remove accessories & wall panels. Lower canopy to the lowest height setting. (Fig I & J)

STEP 2

At each corner, pull the lever where indicated to release the leg slider. Be careful not to pinch your hands by keeping away from the bottom of the slider (where the plastic ends), the slider will move down when released. If the pin is difficult to release, relieve tension by lifting up slightly on the rectangular frame bars attached to the slider.


STEP 3

Grab the top of the center frame section where it forms an inverted "V". (Fig. K) Lift slightly and walk towards partner as the frame folds in. Keep walking until the frame is about halfway closed. Be sure to avoid pinching your hands or fingers. Hold the outside legs and continue closing the canopy as you walk towards your partner. The folded canopy should stand on its own. (Fig. L)

STEP 4

With the canopy standing, unzip the wheeled bag and slide the bag over and down the frame slowly (Fig. M) until the entire canopy is in. Invert the canopy and zipper shut (Fig N). Turn canopy right side up and place stakes in bag pocket.

COMPLETED

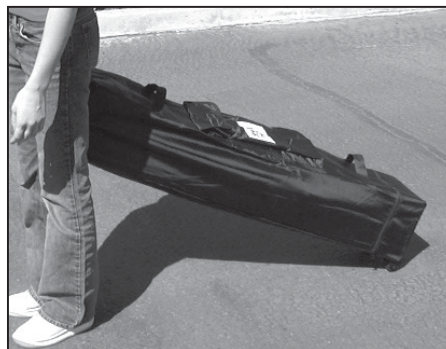

CELINA

Celina Tent Inc.

5373 State Route 29, Celina, Ohio 45822

Phone: 419-586-3610 / 1-866-438-8368

www.TentPrinting.com / www.GetTent.com