


WWW.GIGATENT.COM Camelot Village

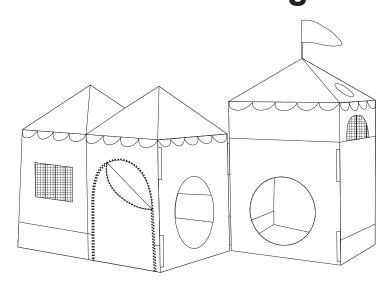


OWNER'S MANUAL

WARNING!

Use caution! The tunnel opens quickly. When opening the tunnel open at arms length or throw away from your body.

Assembly instructions

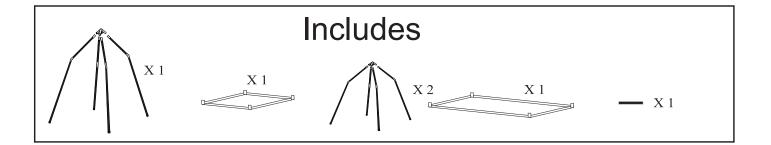


To set up the Camelot Village:

- A. Remove the folded play tents from the carry bag.
- B. Open the tents and lay it flat on the ground.
- C. Remove the folded poles from the carry bag and assemble all sections.
- D. There are 3 sets of poles 1 large and 2 small ones.
- E. Take the larger tent with the smaller base <u>FIGURE A</u> and insert the larger pole set into the base FIGURE B. (**NOTE wider side of hub should face door**)
- F. Carefully insert the poles into the fabric shell thru the door <u>FIGURE C</u>
- G. Next, take the larger base <u>FIGURE D</u> and insert the 2 smaller pole sets into the corner sockets of the base <u>FIGURE E</u>

(NOTE wider side of hub should be positioned the width of the tent)

- H. Carefully insert the poles into the fabric shell thru the door FIGURE F
- I. attached the 2 tents together by using the side velcro FIGURE G and add the flag to the tower

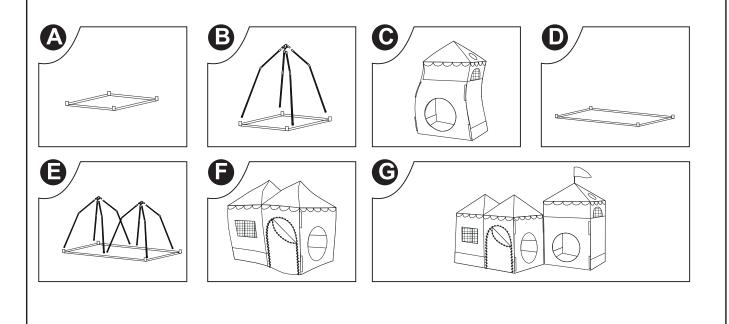

CARE INSTRUCTIONS

Wipe with damp cloth using warm water or non bleach detergent Never stow away wet or dirty.



This product meets the flammability requirements of CPAI - 84. The fabric may burn if left in continuous contact with any flame source.

The application of any foreign substance to the product fabric, may render the flame resistant properties ineffective.

EXTREME CAUTION!

Never use fuel any burning oxygen consuming device, or any device that produce any fumes, including, stoves, lanterns, candles, hibachis, or heaters in or around your product. This could in result carbon poisoning, monoxide injury and/or death.

manufactured in our state of the art factory in china

WARRANTY

Warranty Term:

3 years from the date of purchase

What is covered:

Warrants to the original purchaser that its products are free from defects in material and workmanship.

What Is Not Covered:

Shall not be responsible for the natural breakdown of materials that occurs inevitably with extended use(e.g., Ultraviolet(UV)light damage on tents, exhausted zippers), or defects caused by accident, abuse, alteration, animal attack, storm damage, misuse or improper care.

What Will Do:

If after inspection we find that a product failed due to a manufacturing or material defect, we will repair or replace the product, at our option, without charge.

How to Obtain Warranty Service:

Return the product, freight prepaid, to the <u>GIGA TENT</u> Customer service department. For return authorization e-mail our office and obtain an Authorization number, Authorization numbers are valid for 30 days from the date of issuance, and must be obtained within 30 days of ship date. Returns will be handled in timely matter Collect shipments or shipments without return authorization will not be accepted.

Repairs:

If your Product needs service or repair due to normal wear and tear, animal attack, accident or some other reason that is not covered under the warranty we will provide the necessary service for a reasonable charge, plus shipping and handling. We require that products accepted for any repair <u>most</u> be properly cleaned according to our recommended care instructions. Please send your product or component that requires repair (e.g. tent fly), postage prepaid, along with a description of what needs attention.

REPLACEMENT PARTS:

Replacement parts may be ordered with consumer service at 1-877-TENTS 01 (873-8601)

We accept Visa Master Card and American express.

• WWW.GIGATENT.COM •