



Please read completely before setting up your QUIK SHADE® Instant Canopy

It is your responsibility to read and save these instructions before attempting to set up your QUIK SHADE® Instant Canopy. We would also like to suggest that you follow these safety precautions, care and maintenance tips when using your QUIK SHADE®:

1. Never set up or continue to use in any rain, wind or storm conditions, especially lightning storms. Damage can occur to your QUIK SHADE® and put you and others in potential danger.
2. We suggest that you take your time in order to avoid bending the frame or pinching your fingers or hands while opening and closing the frame.
3. Avoid setting up your QUIK SHADE® on steep inclines.
4. Always use the provided stakes to secure your QUIK SHADE® to the ground unless you set up on concrete or asphalt.
5. Do not use your QUIK SHADE® for permanent shelter. It was designed for temporary use only.
6. Keep your QUIK SHADE® canopy away from heat and flames at all times. Do not barbecue or build fires under you QUIK SHADE®.
7. Never leave your QUIK SHADE® unattended.
8. Hand wash the canopy using only mild soap and water. Never use harsh detergents, abrasives or bleach. Do not machine wash.
9. Never fold or store your QUIK SHADE® when it is wet or damp. Let it dry completely to avoid mildew.
10. **ALWAYS USE COMMON SENSE.**

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent meets the flammability requirements of CPAI-84. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

DO NOT RETURN YOUR CANOPY TO THE PLACE OF PURCHASE
Please contact Bravo Sports for questions, comments, parts & accessories,
or assistance with any warranty related issues.
Bravo Sports 12801 Carmenita Rd. Santa Fe Springs, CA 90670
quikshade.com
Toll free: (800) 248-5327 Canada: (877) 992-7286



QUIK SHADE® Set-Up and Safety Instructions (ver 09)



User's Manual

Set Up

Before proceeding with the assembly of your QUIK SHADE® Instant Canopy, please make yourself familiar with its parts and how they make your QUIK SHADE® function.

The following parts are inside your QUIK SHADE® box:

- 1 QUIK SHADE® Assembled Frame
- 1 Canopy Top
- 1 Wheeled Bag*
- 4 Stakes

Step 1

Place your QUIK SHADE® in the center of the set-up area. With a partner on the opposite side of the frame, hold onto the two outer legs and lift slightly for clearance. Take a few steps back until you extend the frame to a full arm's length - approx. 4 feet (figure A). To improve the opening and closing action of your QUIK SHADE® you may spray some silicone lubricant on the outer legs.

Step 2

Place the canopy over the top of the frame (fig B). Use the hook and loop straps to secure each corner of the cover to the upper portion of each leg (fig C).

Step 3

Grab the bottom of the center frame section where it forms a "V" and says "OPEN" (fig D). Lift slightly and slowly walk backward until the frame is fully extended (fig E). Be sure to avoid pinching your hands or fingers.

Step 4

At each corner, hold the leg of the frame with one hand and lift the slider. It should lock into place with a click with the spring loaded pin going into the hole (fig G). For units with the "Quik Klik" sliders, push the locking button in while pulling the slider up until the button pops through (fig F).

Step 5

Secure remaining side hook and loop straps to the frame (fig H). The adjustable legs offer multiple height levels. Simply lift a leg and adjust the inner leg up or down until the button pops into place. For Ultra Compact units, there are three telescoping legs. Be sure to pull both inner legs out to extend the canopy. Repeat on the other legs. Use the stakes to secure frame to the ground if necessary.

 
 
Step 6

Fill out included warranty form. Product information can be found on the sticker on the eaves of the frame (fig I). Staple your receipt to warranty form and store in a safe place.

Step 7

Go to: BravoSportsCorp.com/ServiceProductRegistration.aspx and register your new canopy. If you have any issues setting up your canopy, have questions, need parts or accessories call our toll free service line: (800) 248-5327.

Final

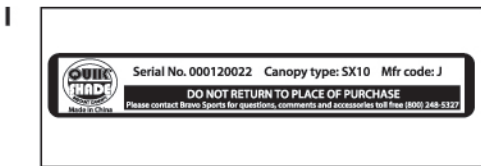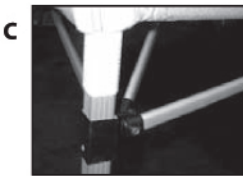

Take Down

Note: The canopy top may remain in place for easier subsequent set-up. However, to prolong the life of the fabric, we recommend that you remove the top when storing your canopy.

WARNING: Before storing your QUIK SHADE®, be sure the canopy top is not wet or damp. Storing your QUIK SHADE® while it is even slightly damp may cause mildew. Allow your canopy top to completely dry before taking it down. If you must take down your QUIK SHADE® while the canopy is damp, remove the canopy top from the frame by unfastening the hook and loop straps. Fold up the frame and lay the canopy top down, fully open, as soon as possible and allow it to completely dry.

Step 1

Remove stakes from ground. Reduce each leg to its shortest position (fig J). For Ultra Compact units compress the lower leg first before the middle one by depressing the lowest button first.

Step 2

If you have a wall accessory installed, remove this first. Then at each corner, pull the rings, or, if you canopy comes with the Quik Klik slider, push the button to release the slider. Be careful not to pinch your hands by staying away from the bottom part of the slider (where the plastic ends), the slider may move fast once released. If the slider is hard, relieve the ceiling assembly a little by lifting the tubes attached to the slider upwards. Your canopy may come with pull pin leg extenders, if so pull the slider rings to telescope the legs in (fig K). If your canopy comes with push pin leg extenders, telescope the legs in by pushing on the buttons.

 
Step 3

Hold the top of the center frame section where it says "CLOSE" (fig L). Lift slightly and slowly walk towards partner as the frame folds in. Keep walking until the frame is about halfway closed. Be sure to avoid pinching your hands or fingers. Hold outside legs and continue closing canopy as you walk towards your partner. The completely folded canopy should stand up on it's own (fig M).

Step 4

With the canopy standing, unzip the wheeled bag and slide bag down slowly (fig N) until entire canopy is in. Invert the canopy and zipper shut (fig O).

Wheeled Bag

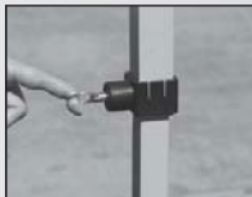

* Not all canopies come with an accessory wall. Please check box for a list of contents.

© 2009 Bravo Sports
12801 Carmenita Rd, Santa Fe Springs, CA 90670
Customer Service Dept. Phone (800) 248-5327 Canada (877) 992-7286
E-mail: consumer@bravosportscorp.com Check us out at www.bravosportscorp.com