

CANOPY SHADE FOR SUNNYDAZE POP-UP CANOPY

Read this manual carefully and save this document for future reference.

WARNING

- Do NOT use open flame beneath or around this shade product.
- Do NOT store flammable liquids or use heat-producing devices around this product, i.e. gasoline, kerosene, propane, barbeque grills, candles, torches, fire pits, deep fryers, smokers, etc.
- Do not use this product for purposes other than it is intended.

CAUTION

1. Please read instructions COMPLETELY before use. If you have questions, please contact us via one of the methods mentioned at the top of this manual.
2. This product is classified as a temporary portable shade product and is intended to provide protection against damages cause by sun, light rain, tree sap, birds, etc. This canopy shade is designed to be quickly and easily removed. If you know strong weather is predicted, remove the cover or take down the unit completely. Sunnydaze Decor does not guarantee this canopy shade under strong weather conditions (i.e. wind, rain, ice, snow) under any circumstance.
3. Proper canopy use and anchoring is the RESPONSIBILITY OF THE OWNER. If your canopy is not securely anchored, strong winds can lift it and cause damage if it is blown over and/or away. Any temporary portable shade product that is not installed properly has the potential to blow away in high winds. Sunnydaze Decor cannot be held responsible for damage resulting from improper installation and use. Damages from improper installation, strong winds, snow, ice or rain are not considered a defect.
4. THIS IS A SHADE PRODUCT AND NOT RECOMMENDED FOR USE AS A PERMANENT STRUCTURE. IT IS NOT DESIGNED TO BE USED IN HIGH WINDS, HEAVY RAIN, SNOW OR ICE STORMS. IT IS NOT DESIGNED TO HOLD ROOF LOADS THAT ACCOMPANY RAIN, SNOW OR ICE.

FABRIC CARE

 **HAND WASH ONLY**  **DO NOT USE BLEACH OR SOLVENTS**  **DO NOT TUMBLE DRY**  **DO NOT IRON**

WASHING

Use warm, soapy water and a cloth to scrub the canopy fabric; dish soap works well. Thoroughly rinse all soap residue before air-drying the fabric. A garden hose with a spray nozzle set to the 'flat' setting works great for removing soap; spray from top to bottom in vertical swipes until all of the soap residue is removed. Never use bleach or harsh cleansers.

DRYING

Hang the canopy fabric to air dry, avoid hanging the fabric over anything with sharp edges that may rip the fabric. Allow air and light to hit as much of the fabric as possible — this will reduce the chance of mold and mildew.

FOLDING

Folding the canopy along existing creases and folds will help it retain its natural shape and PU coating. Never bunch up the canopy top or force it into storage bags as it will reduce the life and water resistance of the fabric.

Any modification to the product or failure to follow recommended care will void the product warranty.

WARNING:

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.