
ULTRAMAX CANOPY ENCLOSURE KIT Assembly Instructions

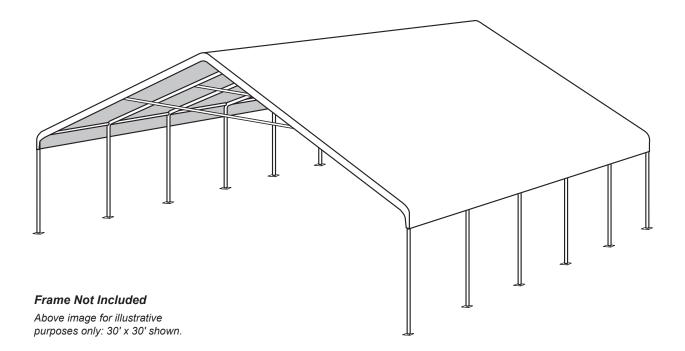

FOR CANOPY MODELS:				
Description	Model #			
24' x 30' 2-3/8" ULTRAMAX - 12 Leg - Enclosure Kit - White	27275			
24' x 40' 2-3/8" ULTRAMAX - 14 Leg - Enclosure Kit - White	27276			
24' x 50' 2-3/8" ULTRAMAX - 18 Leg - Enclosure Kit - White	27277			
30' x 30' 2-3/8" ULTRAMAX - 12 Leg - Enclosure Kit - White	27775			
30' x 40' 2-3/8" ULTRAMAX - 14 Leg - Enclosure Kit - White	27776			
30' x 50' 2-3/8" ULTRAMAX - 18 Leg - Enclosure Kit - White	27777			

Page 1



ATTENTION:

This shelter product is manufactured with quality materials. It is designed to fit the ShelterLogic®, LLC custom fabric cover included. ShelterLogic®, LLC Shelters offer storage and protection from damage caused by sun, light rain, tree sap, animal - bird excrement and light snow. Please anchor this ShelterLogic®, LLC structure properly. See manual for more anchoring details. Proper anchoring, keeping cover tight and free of snow and debris is the responsibility of the consumer. Please read and understand the installation detail, warnings and cautions prior to beginning installation. If you have any guestions call the customer service number listed below. Please refer to the warranty card inside this package.

DANGER:

Prior to installation, consult with all local municipal codes regarding installation of temporary shelters. Choose the location of your shelter carefully. DANGER: Keep away from electrical wires. Check for overhead utility lines, tree branches or other structures. Check for underground pipes or wires before you dig. DO NOT install near roof lines or other structures that could shed snow, ice or excessive run off onto your shelter. DO NOT hang objects from the roof or support cables.

WARNING:

Risk of fire. DO NOT smoke or use open flame devices (including grills, fire pits, deep fryers, smokers or lanterns) in or around the shelter. DO NOT store flammable liquids (gasoline, kerosene, propane, etc.) in or around your shelter. Do not expose top or sides of the shelter to open fire or other flame source.

CAUTION:

Use CAUTION when erecting the frame. Use safety goggles during installation. Secure and bolt together overhead poles during assembly. Beware of pole ends. Use goggles when installing bungee cords. Bungee cords are under extreme tension and may cause severe injury to eyes. Please use caution when applying, as they may snap out of your hand and cause injury.

PROPER ANCHORING AND INSTALLATION OF FRAME: PROPER ANCHORING OF THE FRAME IS THE RESPONSIBILITY OF THE CONSUMER.

ShelterLogic®, LLC is not responsible for damage to the unit or the contents from acts of nature. Any shelter that is not anchored securely has the potential to fly away causing damage, and is not covered under the warranty. Periodically check the anchors to ensure stability of shelter. The preferred anchoring system includes the use of bolted cement wedge lags for the frame. ShelterLogic®, LLC cannot be responsible for any shelter that blows away. NOTE: Your shelter's cover can be quickly removed and stored prior to severe weather conditions. If strong winds or severe weather is forecast in your area, we recommend removal of cover. Check with your insurance carrier for any damage as you would for any other outdoor structure or personal property claims.

REPLACEMENT PARTS, ASSEMBLY, SPECIAL ORDERS:

Genuine ShelterLogic®, LLC replacement parts and accessories are available from the factory, including anchoring kits for nearly any application, replacement covers, wall and enclosure kits, vent and light kits, frame parts, zippered doors and other accessories. All items are shipped factory direct to your door.

QUESTIONS - CLAIMS - SPECIAL ORDERS? CALL OUR CUSTOMER SERVICE HOTLINE:

U.S. CUSTOMER SERVICE: 1-800-524-9970 INTERNATIONAL CUSTOMER SERVICE: 001-860-945-6442 CANADA CUSTOMER SERVICE: 1-800-559-6175 HOURS OF OPERATION: MON-FRI 8:30AM-8:00PM EST, SAT-SUN 8:30AM-5:00PM EST.

CARE AND CLEANING:

A tight cover ensures longer life and performance. Always maintain a tight cover. Loose fabric can accelerate deterioration of cover fabric. Immediately remove any accumulated snow or ice from the roof structure with a broom, mop or other soft-sided instrument. Use extreme caution when removing snow from cover- always remove from outside the structure. DO NOT use hard-edged tools or instruments like rakes or shovels to remove snow. This could result in punctures to the cover. DO NOT use bleach or harsh abrasive products to clean the fabric cover. Cover is easily cleaned with mild soap and water.

WARRANTY:

This shelter carries a full limited warranty against defects in workmanship. ShelterLogic®, LLC warrants to the Original Purchaser that if properly used and installed, the product and all associated parts, are free from manufacturer's defects for a period of:

1 YEAR FOR COVER FABRIC, END PANELS AND FRAMEWORK

Warranty period is determined by date of shipment from ShelterLogic®, LLC for factory direct purchases or date of purchase from an authorized reseller, (please save a copy of your purchase receipt). If this product or any associated parts are found to be defective or missing at the time of receipt, ShelterLogic[®], LLC will repair or replace, at it's option, the defective parts at no charge to the original purchaser. Replacement parts or repaired parts shall be covered for the remainder of the Original Limited Warranty Period. All shipping costs will be the responsibility of the customer. Parts and replacements will be sent C.O.D. You must save the original packaging materials for shipment back. If you purchased from a local dealer, all claims must have a copy of original receipt. Check with your insurance carrier for any damage as you would for any other outdoor structure or personal property claim. After purchase, please fill out and return warranty card for product registration. Please see warranty card for more details.

Covered by U.S. Patents and patents pending: 6.871.614; 6.994.099; 7,296,584; D 430,306; D 415,571; D 414,564; D 409,310; D 415,572











DESCRIPTION OF PARTS:

	SIDE WALLS			
	Fits Model #	Enclosure Kit Model #	Side Wall Model#	Quantity
· · · · · · · · · · · ·	24'x30' - 27272	27275	802145	2
	24'x40' - 27276	27276	802146	2
·	24'x50' - 27277	27277	802147	2
	30'x30' - 27775	27775	802145	2
	30'x40' - 27776	27776	802146	2
	30'x50' - 27777	27777	802147	2

BACK PANELS			
Fits Model #	Enclosure Kit Model #	Back Panel Model#	Quantity
24'x30' - 27272	27275	802141	1
24'x40' - 27276	27276	802141	1
24'x50' - 27277	27277	802141	1
30'x30' - 27775	27775	802143	1
30'x40' - 27776	27776	802143	1
30'x50' - 27777	27777	802143	1

3	ZIPPER DOO	R PANELS	
Fits Model #	Enclosure Kit Model #	Side Wall Model#	Quantity
24'x30' - 27272	27275	802142	1
24'x40' - 27276	27276	802142	1
24'x50' - 27277	27277	802142	1
30'x30' - 27775	27775	802144	1
30'x40' - 27776	27776	802144	1
30'x50' - 27777	27777	802144	1

	BUNG		
	Enclosure Kit Model #	Bungee Cord Model#	Quantity
	27275	10066	114
	27276		122
	27277		138
_	27775		122
	27776		130
	27777		146

*For holding enclosure walls and doors


NOTES:

- Canopy Enclosure panels attach to frame with bungee cords.
- Leave Canopy Cover bungees in place when attaching Enclosure panels.

CAUTION: Bungee Cords are under extreme tension. Use Caution when installing. Safety glasses are recommended to prevent injury.


1. ATTACH SIDE WALLS TO FRAME

- **A.** *If tightened at corner leg poles,* disengage the TwistTite[™] cord and "S" hook from canopy cover and corner legs. Re-tighten *after* all Enclosure panels have been secured.
- **B.** Attach the extension panels with bungees to the cross rails at the top first. Adjust the panels as needed to ensure a tight and even fit before securing to the leg poles.

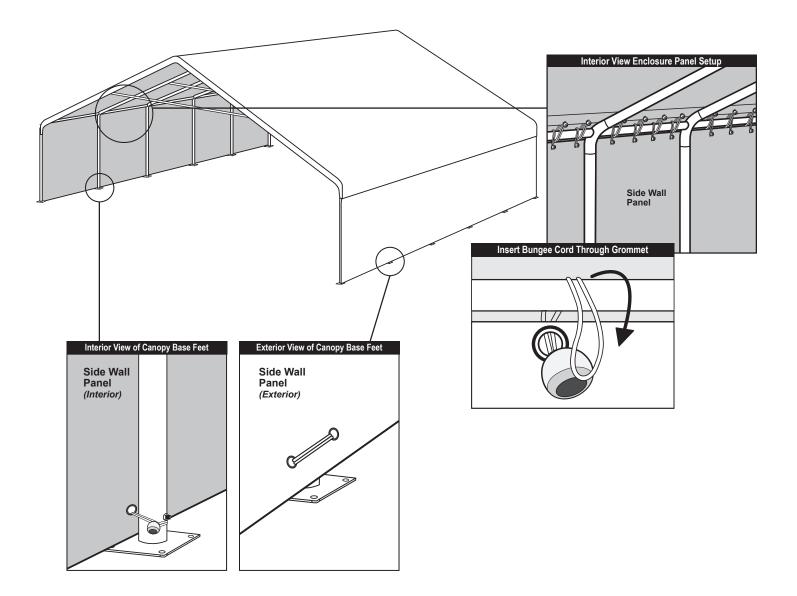


2. ATTACH ENCLOSURE END AND ZIPPER DOOR PANELS

When securing enclosure panels to corner legs, note that each bungee is shared with the neighboring panel. **NOTE:** *Door panels zippers must be closed when securing door panel.*

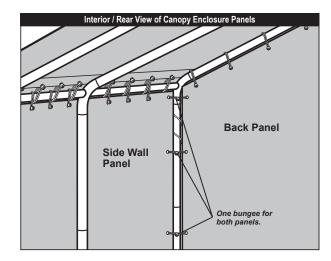

3. TIGHTEN THE COVER WITH TWIST TITE™

- **A.** Wrap the cord with plastic ball and "S" hook at the corners of the cover around the corner leg poles. Insert "S" hook into the hole of the corner leg poles.
- **B.** Twist each leg pole toward the inside of the shelter until the cover becomes tight Twist the leg poles equally to ensure the cover stays aligned during tightening.

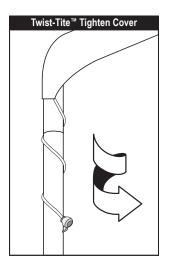

4. KEEPING DOOR PANELS OPEN

The front door panel has grommets positioned to hold the doors open in either of the below configurations with the use of bungee cords.

