



1 *Open up the tent frame slightly and drape cover over the frame.*

2 *Attach the corner and truss bar hook and loop straps to secure cover.*



3 *Adjust the height by pulling out legs until push button snaps in. Set to higher setting if desired.*