

Traditional one piece party canopy



Traditional Party Canopy:

Full of color. The Traditional Eureka! Party Canopy is compact, easy to install and a favorite for homeowners who want to do it themselves.

Party Canopy Construction Features:

- 11 oz. vinyl laminate tent fabric
- Anodized sectional aluminum poles
- Durable **D** fittings
- Reinforced corners and pole positions
- Storm lines at all center poles
- Sidewall ropes
- Attached/braided guy ropes
- Storage bags included





Standard colors available

Available in: 10', 15', 20' and 30' widths and 30' Ovals

Traditional one piece party canopy

ASSEMBLY [20'x30' SHOWN] :

1. Inspect the site and make sure the area is level, free of utilities and overhangs. Unload poles and tent bundles.
2. Lay the canopy out, on a ground cloth, with the top side up. Stretch and square the fabric to remove slack. Pull the guy ropes out from the canopy. See fig.1.
 - Thread a guy rope through a hole in the rope slider. Thread the rope end through the remaining hole in the rope slider. To work properly, the guy rope must enter the slider from the same side each time- as illustrated. Repeat with remaining guy ropes and sliders. See fig.2.
3. Drive the stakes 4' out and at a slight angle away from the canopy. Stake the corners first, using two stakes placed at 90° from each corner. See fig.1. Continue staking until all guy ropes are at 4'. Be sure to leave enough slack in the guy ropes to raise the poles.
4. If using aluminum poles, assemble them and make sure each snap button is secured.
5. Install the side poles from the underside of the canopy. Insert pole pins up through both the grommet and D-ring. See fig.3. Stand the poles up at a 60° angle with their base toward the center of the tent. Set the corner poles first, then the side poles. See fig.4.

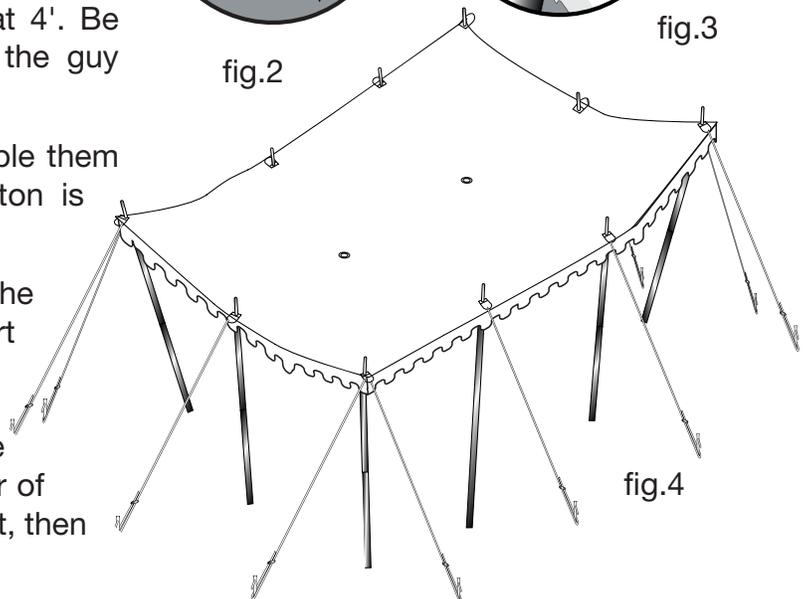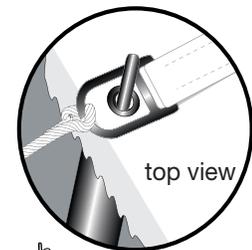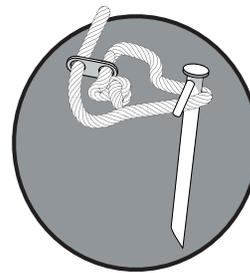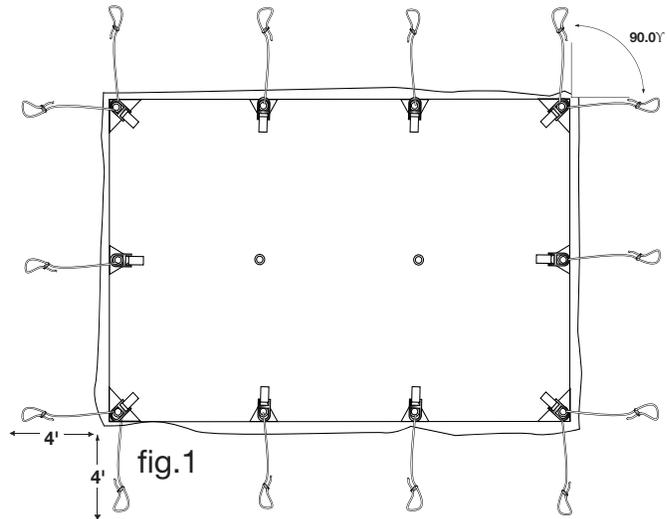

Traditional one piece party canopy

6. With the perimeter poles set, walk under the tent and insert center pole pin into the grommet at the top of the canopy. With this pin in place, lift and push the pin end skyward and the center pole base toward center of tent to raise the pole and canopy.

- If your tent has multiple center poles, the first pole base should be angled at 45° to center. Stake the base of this pole so that it does not slip. Raise the remaining center poles. When you have reached the 45° angles, stake each pole. Return to the first center pole and adjust to almost vertical. Adjust the other poles to almost vertical until all center poles are raised and adjusted.

- With all center poles almost vertical, bring them into line. Have someone stand at one end of the tent. Align each center pole as directed by that person. Then align each center pole from the sides of the tent. See fig.5.

7. If the top of the center pole appears to be leaning toward one end:

- Tighten guy ropes and straighten side poles, at the end opposite the lean, to pull the center pole back to true.
- Then straighten and adjust the guy ropes at the other end. Be careful, do not pull the center pole out of alignment.
- When center poles appear vertical, adjust opposing end side poles simultaneously to avoid drawing the entire tent toward one side or the other. After end side poles are adjusted and guy ropes are secured, repeat down the length of the tent. Again, avoid pulling or drawing entire tent to one side or the other.
- Secure the center pole. Drive a stake into the ground near the base. Tie a jump rope around the center pole and to the stake. See fig. 6.

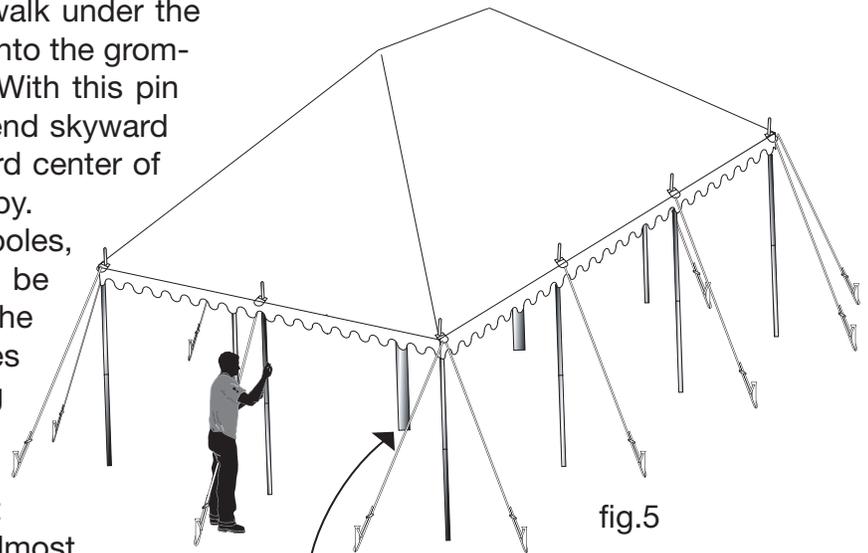


fig.5

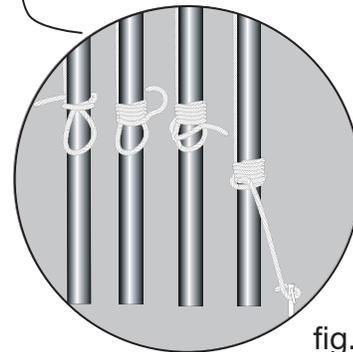


fig.6

8. If using sidewalls, clip the sidewalls to the valance rope. Sidewalls overlap approximately 2'. Buckle the ends to insure complete enclosure.

NOTE:

Severe weather can damage tents. If severe weather is expected, take down the tent and store in a safe area.


Traditional one piece party canopy

PARTS & ASSEMBLIES

DESCRIPTION	QNTY	PRODUCT CODE	DESCRIPTION	QNTY	PRODUCT CODE
10 X 10 1 PC TOP	1	2410010	20 X 30 1 PC TOP	1	2410320
7' 1.37 SIDEPOLES	4	2470127	20 X 30 1PC TOP B/O	1	2410321
7' 1.75 SIDEPOLES (HD)	4	2470128	20X30 OTC PKG	1	2410435
9'6" 1.75 CENTER POLE	1	2470117	20X30 H.D. PKG	1	2470247
24" STEEL STAKES	9	2470002	24" STEEL STAKES	16	2470002
15 X 15 1 PC TOP	1	2410120	20 X 40 1 PC TOP	1	2410420
15 x 15 1 PC TOP B/O	1	2410121	20 X 40 1PC TOP B/O	1	2410421
15X15 OTC PKG	1	2410433	20X40 OTC PKG	1	2410436
15X15 H.D. PKG	1	2470245	20X40 H.D. PKG	1	2470248
24" STEEL STAKES	13	2470002	24" STEEL STAKES	19	2470002
20 X 20 1 PC TOP	1	2410220	30 X 40 1 PC OVAL TOP	1	2410520
20 X 20 1PC TOP B/O	1	2410221	2 PC 14 ' ALUM C.P.	2	2470137
20X20 OTC PKG	1	2410434	7' 1.75 ALUM S.P.	12	2470128
20X20 H.D. PKG	1	2470246	24" STEEL STAKES	22	2470002
24" STEEL STAKES	13	2470002			


Traditional one piece party canopy

20 x 20 SCHEMATIC

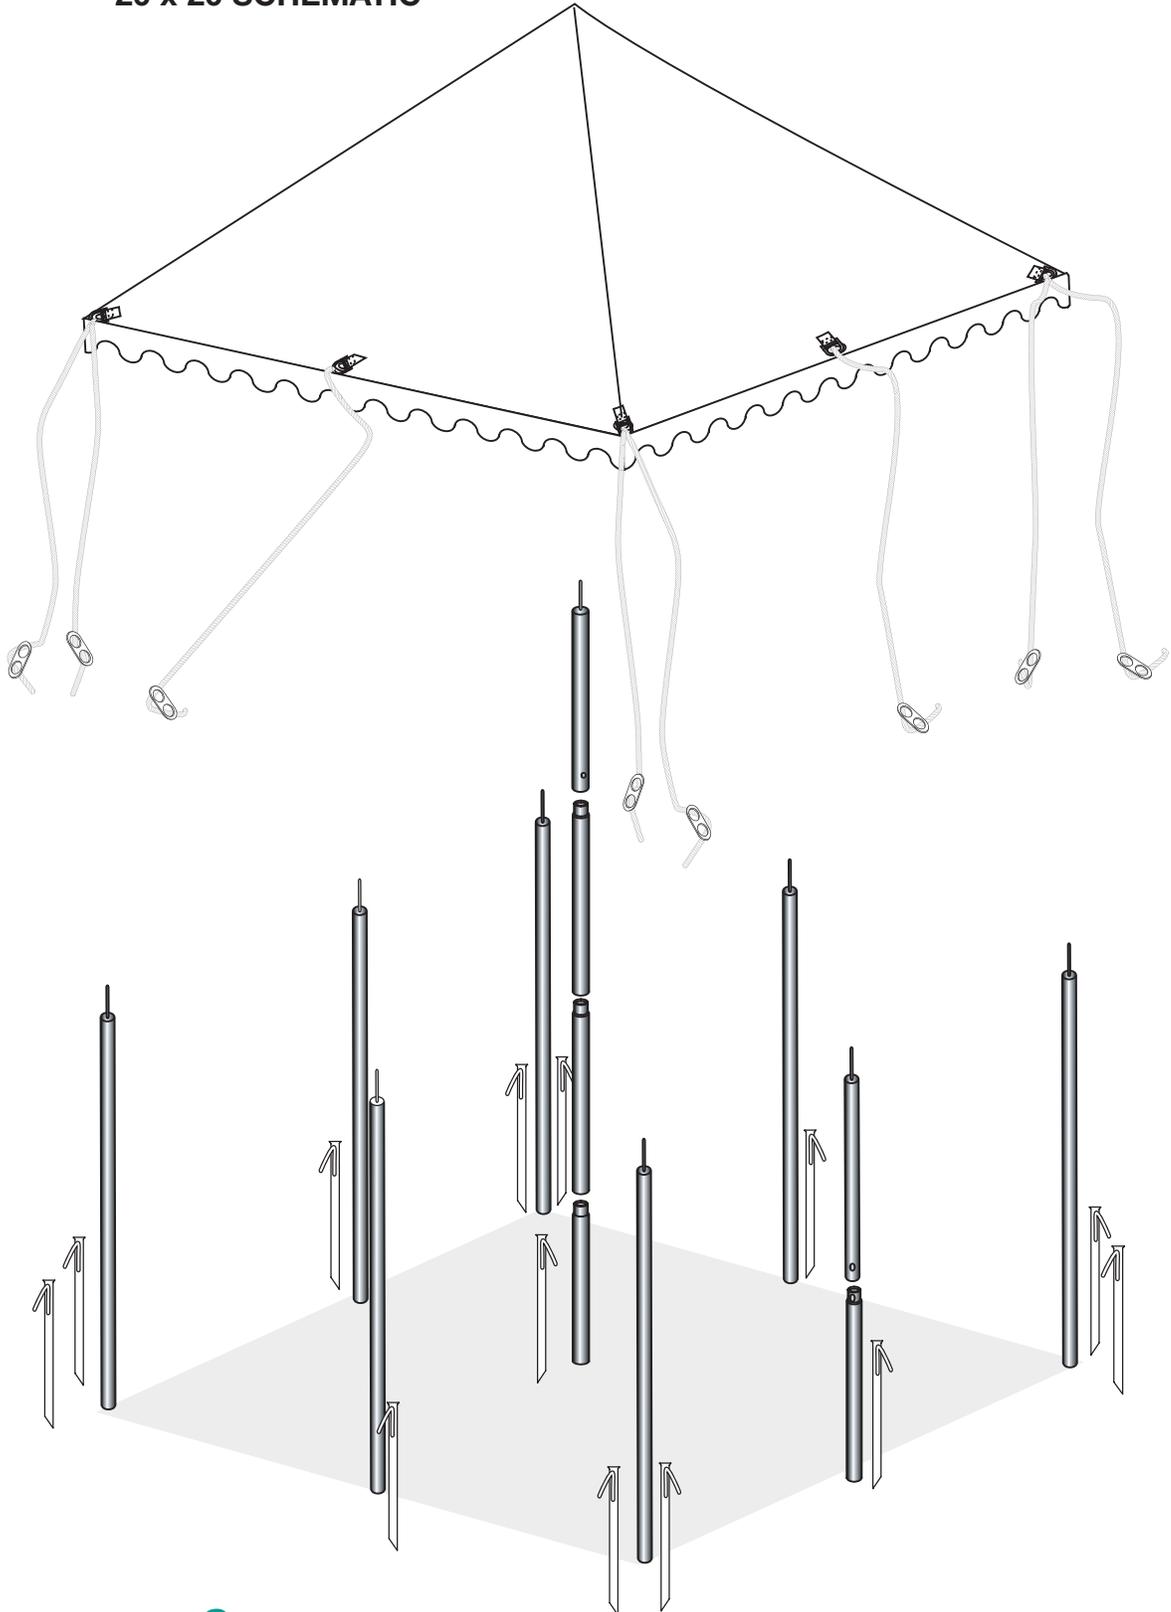


Traditional one piece party canopy

20' X 20' WITH 7' SIDES

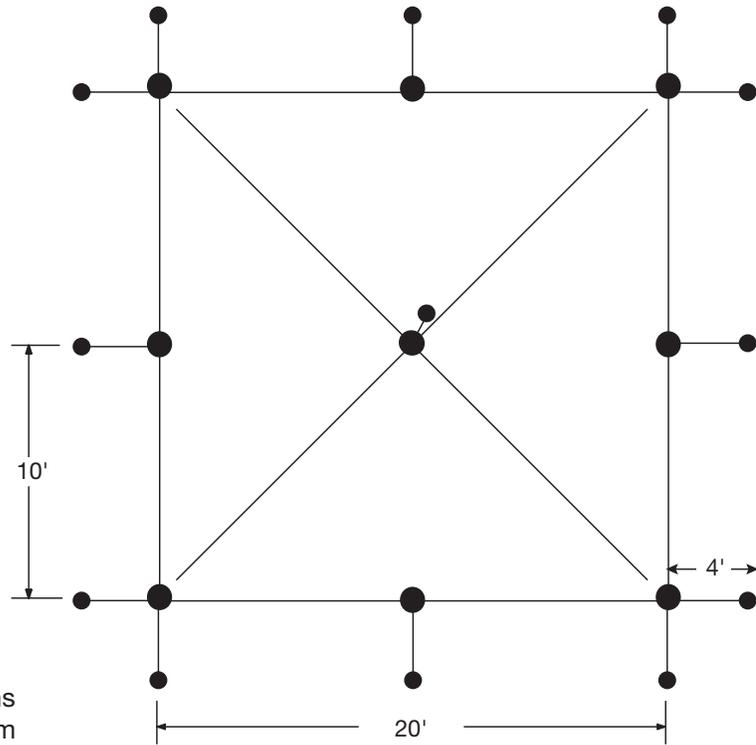


Note: Additional stakes will be necessary in soft soil conditions or whenever stakes pull up from the ground.


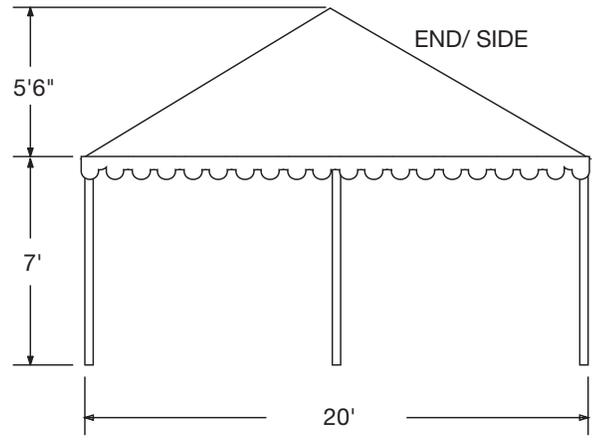


Traditional one piece party canopy

20' X 30' WITH 7' SIDES

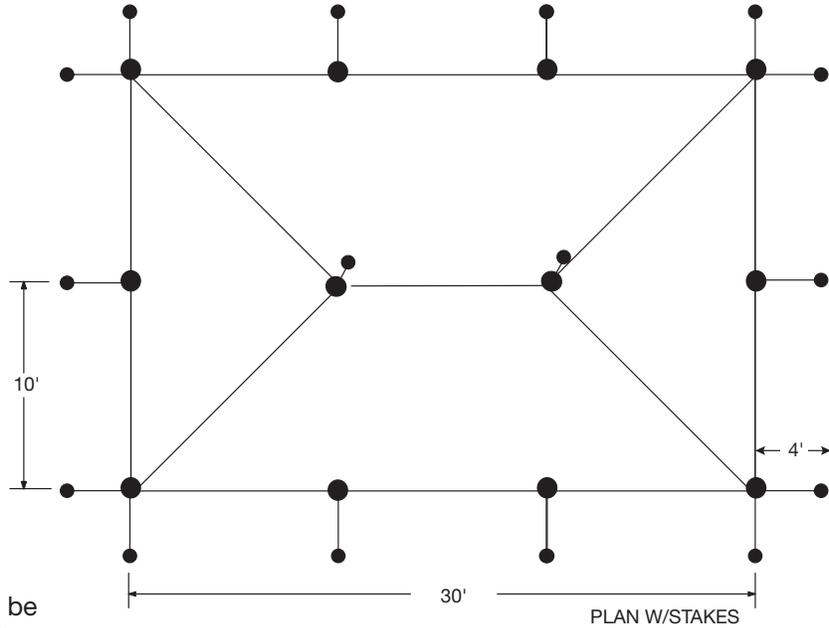


Note: Additional stakes will be necessary in soft soil conditions or whenever stakes pull up from the ground.

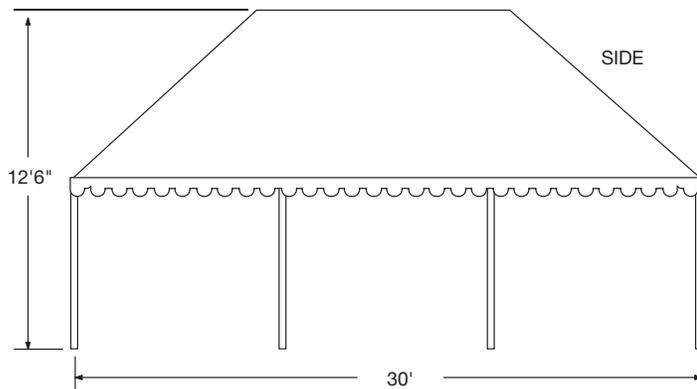
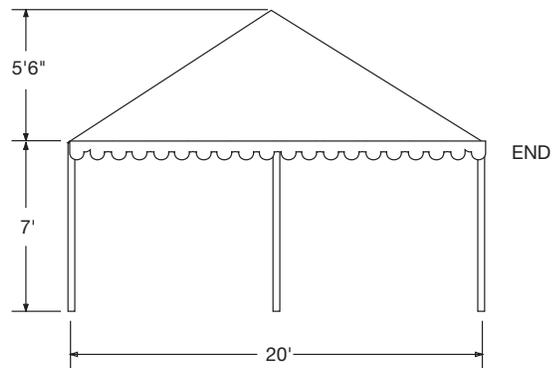


Traditional one piece party canopy

20' X 40' WITH 7' SIDES

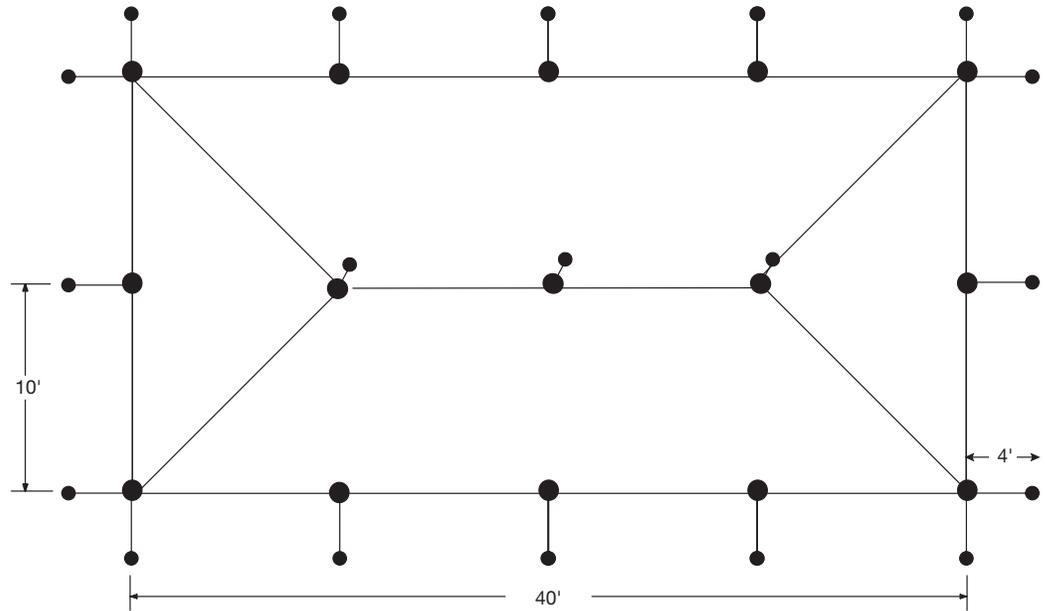


Note: Additional stakes will be necessary in soft soil conditions or whenever stakes pull up from the ground.

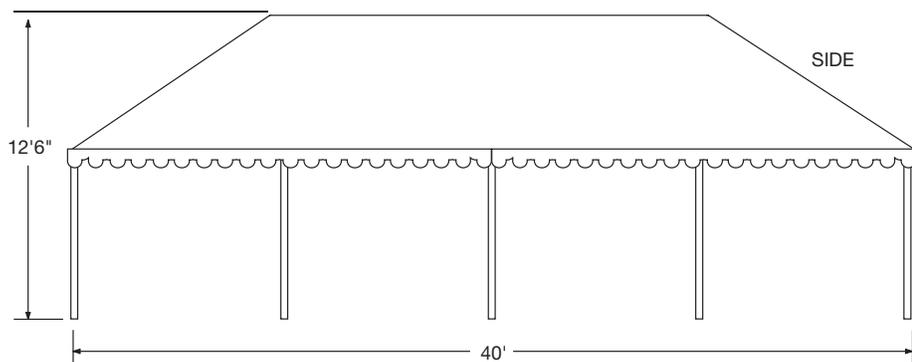
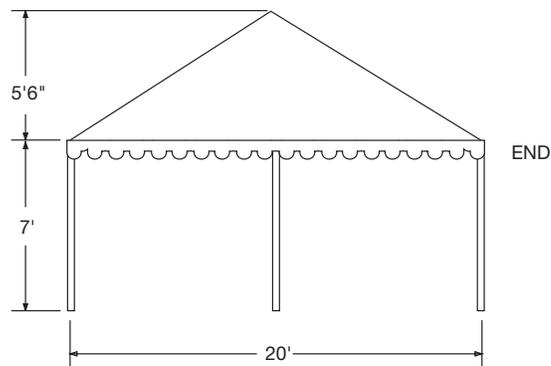


Traditional one piece party canopy

30' x 40' OVAL WITH 7' SIDES

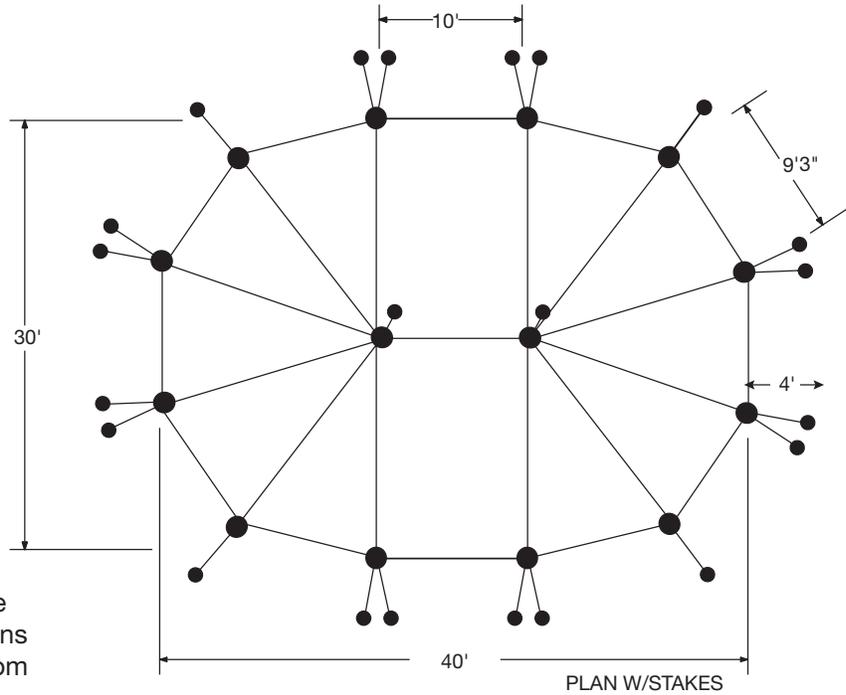


Note: Additional stakes will be necessary in soft soil conditions or whenever stakes pull up from the ground.

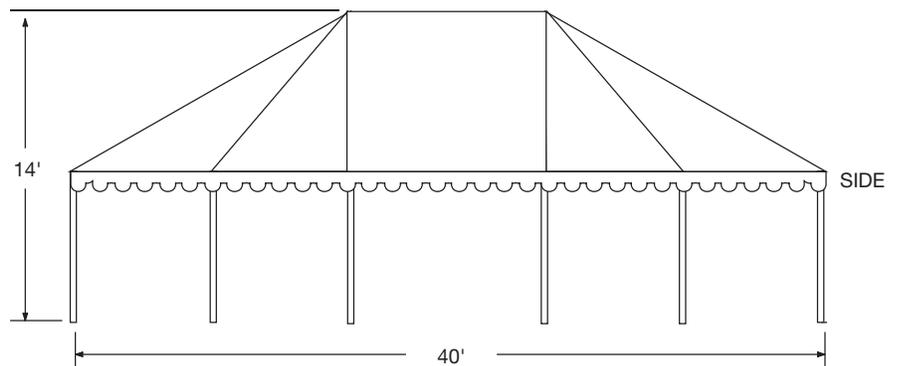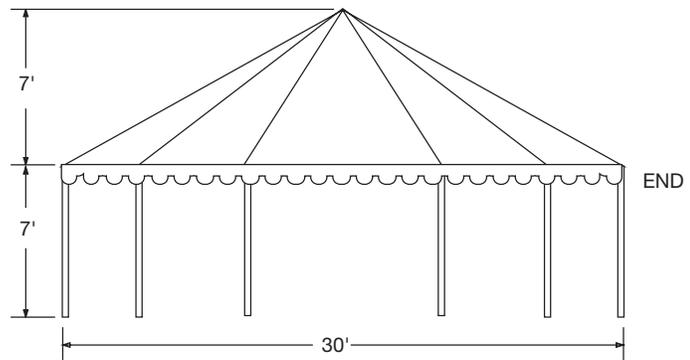

Traditional one piece party canopy

30' X 60' OVAL WITH 7' SIDES

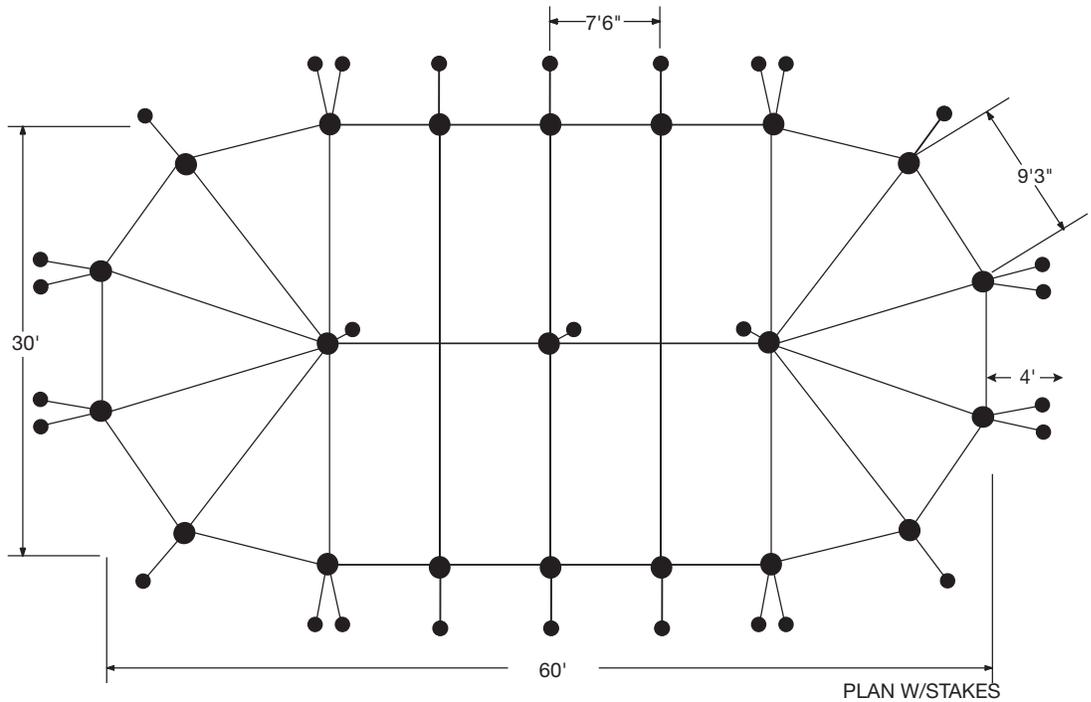

Note: Additional stakes will be necessary in soft soil conditions or whenever stakes pull up from the ground.

