



UC-3

Popup-Shade™

Warning:

KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS GAZEBO FABRIC.
This Gazebo is made with fabric that meets CPAI – 84 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the gazebo fabric may render the flame-resistant properties ineffective.

Warranty

It is important that you read this carefully before attempting the setup!

CONGRATULATIONS!

You have taken a giant step into a new world of **Personal-Shelter®**.
The Best Choice in Popup-Shade™ ... wherever life-takes-you!

Caution!

Please read this before proceeding. As a new Undercover®
User it's your responsibility to be fully aware of the following
warnings.

- The frame **MUST-BE-STAKED** or properly weighted down at all times.
- Use extreme caution, even in light wind conditions!
Takedown in wind speed of 10 MPH or greater.
- **Never** leave your shelter unattended! Wind and rain can cause frame damage and or possibly result in serious injury to you or others.
- **Your Undercover® is a temporary pop-up shelter, do not leave setup for extended periods of time.**
- Keep all flame and heat sources well away from the fabric top. **DO NOT** build fires within the shelter.

Care and Maintenance:

To clean the polyester-skin use mild soap and water, rinse thoroughly. Be sure the skin is completely dry before storing. If you experience any leaking or dripping from the seams, use seam-sealer, available at most hardware stores. Your Undercover® Personal-Shelter® should give you years of service with minimal maintenance and care.

Undercover® Product Warranty:

Undercover® warrants to the original retail purchaser of this product to be free from defects in material and workmanship for 24 months from the date of purchase. This warranty is void if the product is used under any other than normal and expected uses, as determined by the manufacturer. It is void and **DOES NOT APPLY TO DAMAGE CAUSED BY WIND, RAIN** or other extreme forces of nature. Nor does it apply to damage directly related to abuse, neglect whether accidental or deliberate. This Undercover® warranty is provide in lieu of all other warranties.

www.iUndercover.com
For Customer Service



OWNERS MANUAL



Operating Instructions

It is important that you read this carefully before attempting the Setup!

One time Polyester-Skin Attachment:

- 1) Place the frame in an open area.
- 2) Partially expand frame to arms length by grabbing two corner legs.
- 3) Unfold Polyester-Skin™ and place it over the partially expanded frame.
- 4) Locate one of (4) Velcro corners on the skin.
- 5) Attach skin to the corner leg by aligning the Velcro, repeat on all (4) corners.
- 6) Locate the (4) leading edge snap-tights and secure to the frame.

Note: When assembling be careful not to let polyester-skin™ touch the ground to prevent dirt and staining.

The Setup

Place the shelter in the center of the area to be covered.

STEP

1



Partially expand frame to arms length by grabbing two corner legs. Set down.



2

Lift at bottom location and step backwards until shelter is fully opened

STEP

3

STEP



Lock each corner by placing left hand on the top of the leg (push-down) and position right hand under sliding corner bar (push-up) until locked into place.



4

STEP

Extend each telescopic leg by stepping on footplate and simultaneously lifting outer-leg to locked position. (extend fully)



5

STEP

ALWAYS ANCHOR! To secure on grass or dirt, locate footplate, insert spike through hole, use hammer to drive spike. For hardpan anchoring; see website.

Caution: The Included (4) Spikes may not be suitable for all soil conditions. Loose, damp or sandy ground may require additional anchoring.

Quick Tips:

* Telescopic legs feature more than one height-adjustment.

* Lock corner sliders before extending telescopic legs.

* To prevent damage... frame should never be forcefully expanded, nor should corner sliders be forcefully locked.

* ALWAYS be sure that frame is securely anchored. Even the slightest wind will lift the shelter causing frame damage and or serious injury. The warranty does not cover damage due to wind, rain or user neglect.

Take Down:

- 1) Remove spikes or weighted anchors.
- 2) Lower the telescopic legs by pushing and releasing each red U-Push™ lever.
- 3) Release each red corner slider.
- 4) Position yourself between two corner legs. Grab upper scissor bars.
- 5) Lift and walk inward until frame is totally folded. (Do not force)
- 6) Place in wheel Spin-Bag™.

Note:

* Polyester-Skin™ can be left on the frame.

* Be sure skin is clean and dry before storage.

* Never force frame action. A gentle lifting and shaking motion will aid in operation.




* Shelter can be leveled on slope by adjusting leg height position as needed.

UC-SUPPORT



IDENTIFYING PARTS

UC-3P10 Vending-Packer™

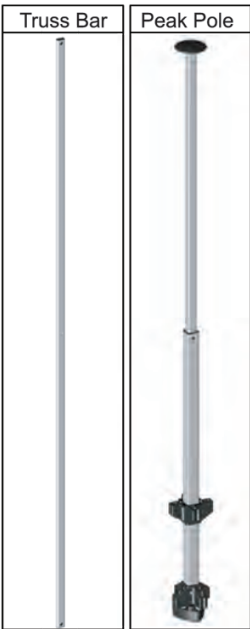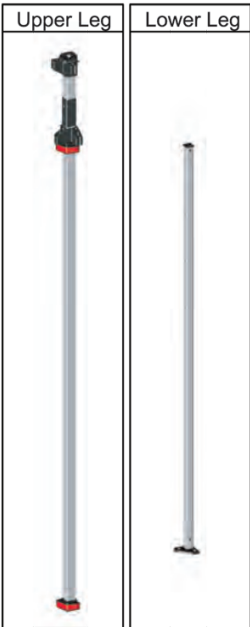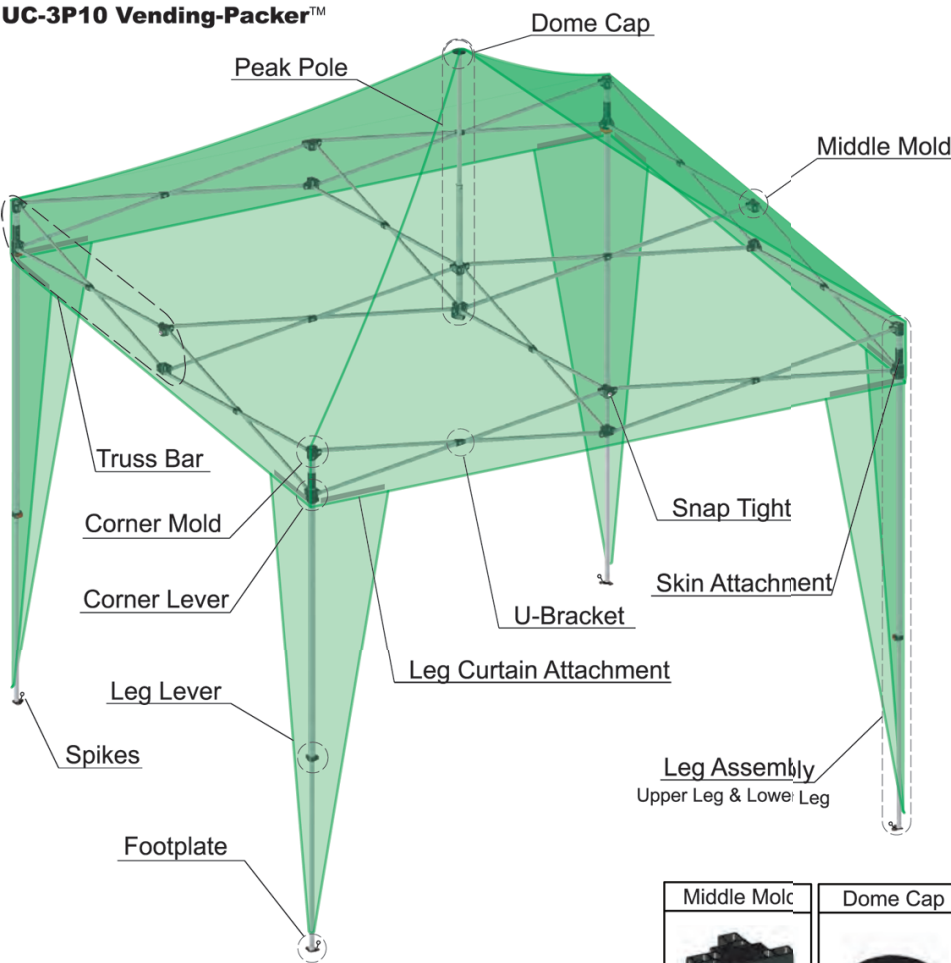

OUR CUSTOMER SERVICE

Skilled personnel are available to provide you with needed replacement parts and/or answer any question, regarding setup, operation or troubleshooting. We appreciate your patronage!

www.iUndercover.com

Undercover[®] Rules-of-the-Road



IMPORTANT INFORMATION READ BEFORE SETUP

-
-
- NEVER setup your Undercover[®] without properly anchoring.
 - NEVER leave your shelter unattended.
 - NEVER burn open flames beneath your shelter.
 - NEVER forcefully setup or take-down.
 - NEVER assume there is no-wind.
 - NEVER assume that light-rain will not pocket water.
 - NEVER setup near overhanging or other electrical wires.
 - NEVER setup in an electrical storm.



-
-
- CAUTION any unattended shelter can cause serious injury and or damage.
 - CAUTION always properly anchor your Undercover[®].
 - CAUTION electrical wires can cause serious injury when in contact with frame.
 - CAUTION be careful not to pinch-fingers between scissor bars while operating.
 - CAUTION light-rain or snow will eventually pocket and destroy the frame.
 - CAUTION forceful operation can damage or destroy frame.
 - CAUTION be sure the Polyester-Skin[™] is completely dry before storing.

-
-
- ALWAYS properly anchor.
 - ALWAYS take-down in wind greater than 10 mph.
 - ALWAYS take-down in an electrical storm.
 - ALWAYS be alert to pocketing water in light-rain.
 - ALWAYS refer to operating instructions, if in doubt.
 - ALWAYS contact Undercover[®] for service questions or replacement parts.

www.iUndercover.com



UC-TEK™

Breakthrough Technology



Chan-X™

Aluminum Strong as Steel:

Patented honeycomb channels set a new standard of super strong, durability and 50% less weight. Leisure has evolved!



U-Push™

Pinch Proof Release Lever: Users often complain about the difficulty of setup and take-down. The U-Push™ sets a new standard of incredible ease-of-operation.

1. During setup red levers automatically engage.

2. Simply push the release lever to disengage.

It's sometimes helpful on the corner release lever to lift-and-push.



Dial-A-Fit™

Peak-Extender: With time all polyester-skins stretch and sag.

Undercover® introduces a peak-extender with just a turn-of-the-dial. Benefits include improved watershed and visual enhancement.

1. The dial is located at the base of the peak-pole.

2. Turn dial clockwise to extend peak.

3. Extend to create the Perfect-Fit™

The Dial-A-Fit™ is found on select models and does not affect normal operation. It is an enhancement feature and usually not necessary to adjustment when brand new.



U-Wedge™

Corner-Seam Support: In pursuit of

the Perfect-Fit™ are critical polyester-skin adjustments located at the top corner position. The U-Wedge™ provides corner-seam support necessary for improved watershed and visual enhancement.

1. Locate wedge adjustment under the skin at the top of each corner leg.

2. Loosen Allen-screw with included wrench.

3. Lift and slide U-Wedge™ outward to provide additional corner-seam support.

4. Tighten Allen-screw.

Peel the polyester-skin off each corner to make required adjustments. U-Wedge™ does not affect normal operational setup, it is an enhancement feature only.



Inner-Truss™

Strength and Durability: Forces of nature play havoc on all pop-up type shelters. The Inner-Truss™ provides unilateral side-and-peak support for lightweight durability and strength.



Sil-X™

Heat Reflective: Typically users find high temps and lingering heat uncomfortable. Undercover® provides an underlying heat reflective skin coating. The result can be a chilling 20 Degree difference. Additionally, Sil-X™ offers 99% UV-Block and helps with colorfast.



CPR™

Core Pivotal Recovery

is the foundation of aluminum frame design and durability. Undercover has evolved the old fashion instant canopy into a new generation of lightweight Pop-up-Shade™.



X-Scape™

Heat Reflective: On a hot sunny day heat rises and seeks release. A very cool peak vent has been integrated into selected Undercover shades to release updrafts and promote cooler air circulation.

1. The X-Scape™ is located at the peak of the polyester-skin, adjust with frame folded.

2. Engage Velcro-Tilt for maximum venting.

3. For moisture control Velcro-Shut.



SBLT™

Stabilizer: The built in SBLT™

Stabilizer uniquely sets the correct-angle thereby enhancing dynamic balance and stability.



Spin-Bag™

Intelligent Design: It's not unusually for users to frustratingly toss most cheap wheel bags. The Undercover® Spin-Bag™ sets a new standard of bag functionality and ease-of-operation.



Vapor-Lite™

Personal-Shelter®: User Mobility is primarily determined by size-and-weight.

Vapor-Lite™ is 50% lighter than steel, setting a new standard of personal transport and setup.



Twist-A-Fit™

Peak-Extender: With time, all

polyester-skins stretch and sag. Undercover® introduces a peak-extender that takes-out-slack. Benefits include improved watershed capabilities and visual enhancement.

1. Adjust the Twist-A-Fit™ with all four corners locked, telescopic legs fully down.

2. Grasp the upper-pole and extend to desired height while twisting clockwise until locked in place.

The Twist-A-Fit™ is found on select models and does not affect normal operation. It is an enhancement feature and usually not necessary to adjustment when brand new.



Banana-Peel-Entry™

Undercover® prides itself on user ease-of-operation. The Spin-Bag™ features an evolved banana-peel-entry design.



Great-Walls™

Lifestyle-Accessory: Fully enclosed zippered P/E walls offer a private environment, mix-and-match the perfect lifestyle solution.



Breeze-Walls™

Lifestyle-Accessory: Fully enclosed zippered screen walls offer a semi-private, bug-free environment, mix-and-match the perfect lifestyle solution.



Gravity-Pak™

Lifestyle-Accessory: Hardpan-anchor solution, includes (4) Nylon sand bags and custom attachment pins. Adds up to 160 lbs of anchor weight.



Migration-Ready™

Most instant canopies weigh 40 lbs and up. Certain Undercover® offerings are specifically backpack designed for easy personal-transport. Enjoy lightweight Pop-up-Shade™ wherever life-takes-you!





Grab-It™

POP Storage Bag Technology:

Our products are all designed with User convenience and function in mind. Just Grab-it off the shelf and store it in the included migration bag.

www.iUndercover.com

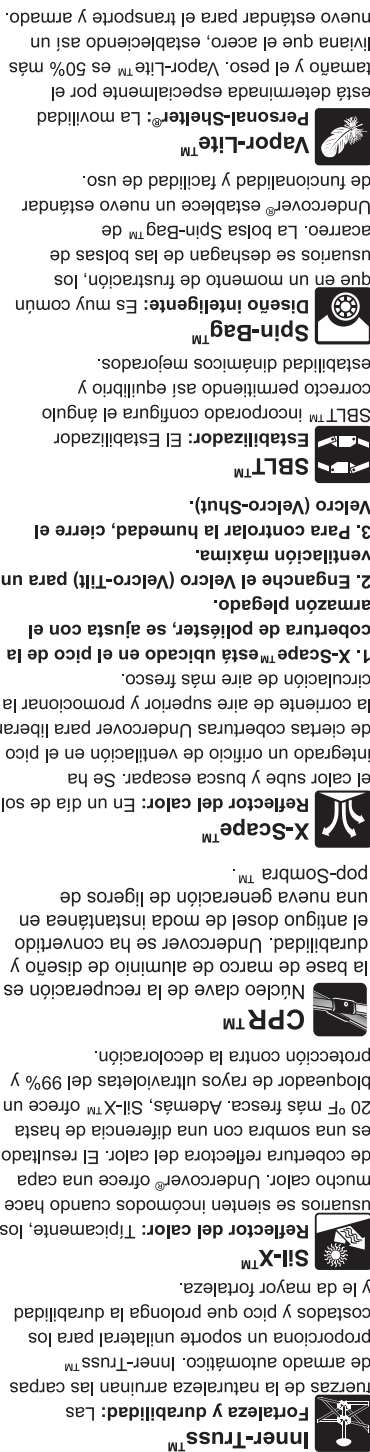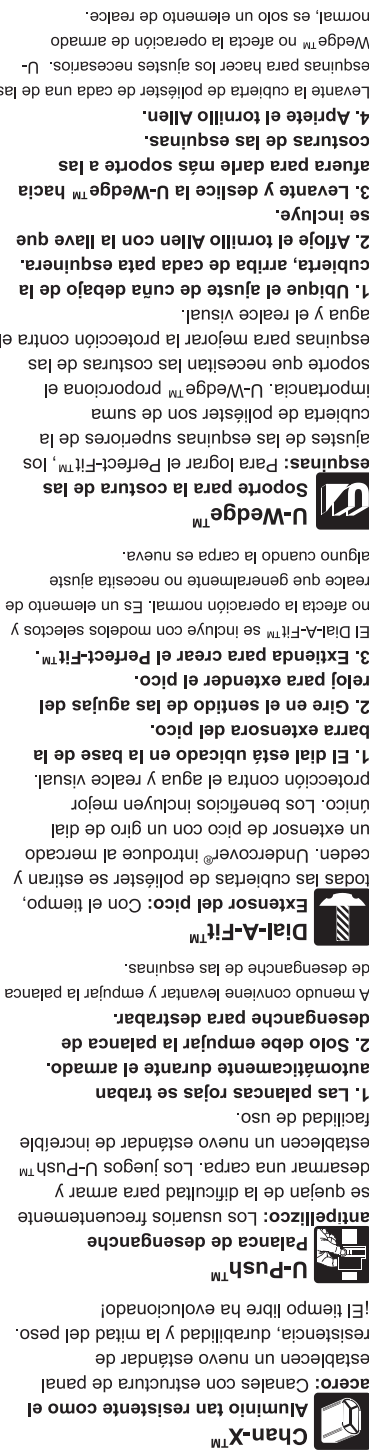

Hoja de ruta para Undercover®



INFORMACIÓN IMPORTANTE - LEA ANTES DE ARMAR

- NUNCA arme su Undercover® sin amarrarla correctamente.
- NUNCA deje la carpa sin supervisión.
- NUNCA encienda un fuego de llama abierta en la carpa.
- NUNCA forcejee para armar o desarmar.
- NUNCA suponga que no hay viento.
- NUNCA suponga que una lluvia no acumulará agua.
- NUNCA instale cerca de cables aéreos ni otros cables eléctricos.
- NUNCA instale durante una tormenta eléctrica.



- PRECAUCIÓN: cualquier carpa sin supervisión puede causar lesiones o daños.
- PRECAUCIÓN: siempre afiance su Undercover® correctamente.
- PRECAUCIÓN: los cables eléctricos pueden causar lesiones graves cuando entran en contacto con el armazón.
- PRECAUCIÓN: tenga cuidado y no se pellizque los dedos en las barras tipo tijera durante el armado.
- PRECAUCIÓN una lluvia o nevisca eventualmente se acumula y destruye el armazón.
- PRECAUCIÓN puede dañar o destruir el armazón si lo forcejea.
- PRECAUCIÓN asegúrese de que la cubierta Polyester-Skin™ esté totalmente seca antes de guardar.

- SIEMPRE amarre correctamente.
- SIEMPRE desarme la carpa si el viento es de más de 10 millas por hora.
- SIEMPRE desarme la carpa durante una tormenta eléctrica.
- SIEMPRE esté alerta a la acumulación de agua durante lluvias.
- SIEMPRE consulte las instrucciones cuando tenga dudas.
- SIEMPRE póngase en contacto con Undercover® para cualquier pregunta que pueda tener o para pedir piezas de repuesto.

www.undercover.com

Para obtener más información, visite www.undercover.com

Todos los derechos reservados Undercover® 2009

Instrucciones para su uso



Es importante que lea estas instrucciones detenidamente antes de armar la carpa.

Colocación del accesorio Polyester-Skin (una sola vez):

- 1) Coloque el armazón en un lugar abierto.
- 2) Abra el armazón extendiéndolo parcialmente hasta el alcance de sus brazos sujetando dos de las patas.
- 3) Despliegue la Polyester-Skin™ y colóquela sobre el armazón parcialmente extendido.
- 4) Ubique uno de los 4 esquineros Velcro en la cubierta.
- 5) Acople la cubierta a la pata esquinera alineando el Velcro. Repita el mismo procedimiento en las 4 esquinas.
- 6) Ubique los 4 broches de ajuste y fíjelos en el armazón.

ensucie y manche, and staining.

Nota: Evite que la Polyester-Skin™ toque el piso cuando arme la carpa para evitar que se

Armado

Coloque la carpa en el centro del área que desea cubrir.


1^{er.}



PASO 1
Abra el armazón extendiéndolo parcialmente hasta el alcance de sus brazos sujetando dos de las patas. Apóyelo.



PASO 2^{do.}
Colóquese entre las patas de las esquinas y ubique las barras tipo tijeras en forma de rombos.

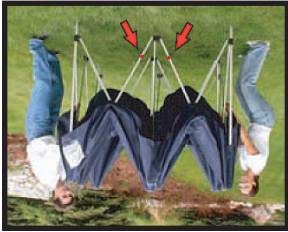

3^{er.}

PASO 3
Levante la parte inferior y camine hacia atrás hasta que la carpa se abra por completo.

Sugerencias:

- * Las patas telescópicas tienen mas de un ajuste de altura.

- * Bloquee los deslizadores de esquina antes de extender las patas telescópicas.

- * Para evitar daños, nunca forcejee el armazón para extenderlo y tampoco forcejee los deslizadores de esquina para bloquearlos.

- * SIEMPRE asegúrese de que el armazón esté bien amarrado. Hasta el viento más leve puede levantar la carpa y dañar el armazón u ocasionar lesionar graves. La garantía no cubre daños ocasionados por vientos, lluvia o negligencia.

Desarmado:

- 1) Quite las estacas o los pesos de amarre.

- 2) Empuje y suelte cada una de las palancas UPush™ rojas para bajar las patas telescópicas.

- 3) Suelte cada uno de los dispositivos deslizantes rojos de las esquinas.

- 4) Ubíquese entre las dos patas de las esquinas. Sujete las barras tipo tijeras superiores.

- 5) Levante y camine hacia adentro hasta que el armazón esté plegado totalmente. (No lo esfuerce.)

- 6) Coloque en la Spin-Bag™ con ruedas.

Nota:

- * La Polyester-Skin™ puede quedar en el

PASO 5^{to.}



PASO 4^{to.}



Bloquee cada una de las esquinas encima de la pata (empuje hacia abajo) y coloque la mano derecha debajo de la barra deslizando de la esquina (empuje hacia arriba) hasta que se traben en su sitio.

Extienda cada una de las patas al mismo tiempo que levanta la pata exterior hasta la posición de enganche (extienda totalmente) incluidos pueden no ser convenientes para todas las condiciones del suelo.

La tierra floja, húmeda o arenosa puede requerir anclaje adicional.

- * Asegúrese de que la cubierta esté limpia y seca antes de guardar.
- * Nunca esfuerce el movimiento del armazón. Un movimiento suave hacia arriba y una pequeña sacudida puede ayudar.
- * La carpa se puede nivelar en una pendiente ajustando la altura de las patas tal como se necesite.

Para obtener más información, visite www.Undercover.com

Todos los derechos reservados Undercover® 2009

Garantía

Es importante que lea estas instrucciones detenidamente antes de armar la carpa.

!FELICITACIONES!

Usted ha tomado la gran decisión de ingresar en el nuevo mundo de **Personal-Shelter®**. La mejor selección en PopUp-Shade™... ¡dondequiera que la vida lo lleve!

!Precaución!

Siřase leer lo siguiente antes de continuar. Como nuevo usuario de Undercover®, su responsabilidad es tener pleno conocimiento de las siguientes advertencias

- El armazón **DEBE ESTAR SUJETO CON ESTACAS** o se lo debe afianzar con pesas en todo momento.
- Tenga mucho cuidado, hasta cuando no haya viento. **Desarme la carpa cuando los vientos sean de 10 millas por hora o más.**
- **!Nunca** deje la carpa sin supervisión! El viento y la lluvia pueden dařar el armazón y usted y otros podrían lesionarse gravemente.
- Undercover® es una carpa temporal. No la deje armada durante un tiempo prolongado.
- Mantenga las llamas y toda fuente de calor bien alejadas del techo de la carpa. **NO** encienda fuegos dentro de la carpa.

Cuidado y mantenimiento

Para limpiar la cubierta de poliéster use un jabón suave y agua, y enjuague bien. Asegúrese de que la cubierta esté totalmente seca antes de guardar. Si el agua se filtra o chorrea por las costuras, use un sellador de costuras que puede comprar en una ferretera. El Undercover® Personal-Shelter® le proporcionará años de servicio con un mínimo de mantenimiento y cuidado.

Garantía del producto Undercover®:

Undercover® garantiza que este producto estará libre de defectos de materiales y mano de obra por un período de 24 meses a partir de la fecha de compra por el dueño original. Esta garantía es nula si el producto se usa de cualquier otra manera que no sea el adecuado o previsto por el fabricante. La garantía es nula y **NO SE APLICA A LOS DAÑOS CAUSADOS POR VIENTOS, LLUVIAS** u otras fuerzas extremas de la naturaleza. Tampoco se aplica a los daños relacionados directamente con el abuso, negligencia, ya sea accidental o deliberado. Esta garantía Undercover® sustituye toda otra garantía.

www.undercover.com
Para atención del cliente



MANUAL DE INSTRUCCIONES



UC-3 Popup-Shade™

Advertencia:

Subsistencia amonestadora todas las fuentes de la llama y de calor lejos de esta tela del gazebo. Este gazebo se hace con la tela que resuelve las especificaciones CPAl-84 para la resistencia de la llama. No es prueba del fuego. La tela se quemará si está ida en contacto continuo con cualquier fuente de la llama. El uso de cualquier sustancia extranjera a la tela del gazebo puede hacer las características ignífugas ineficaces.

Undercover ID VBU 69258

Made in China • Undercover® Littleton, CO