




E. HOW TO SET UP YOUR WALLS (OPTIONAL)

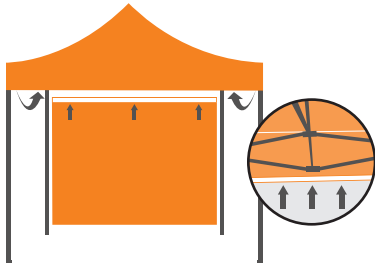

Step 1
Locate the hook & loop fasteners on your tent's top and on the inside of your wall.

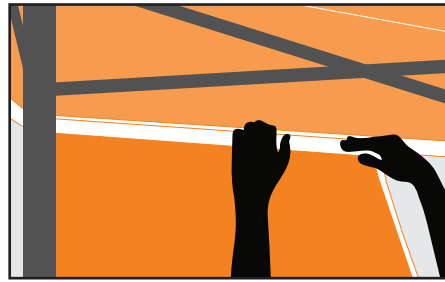


Step 2
Next, hold your wall up so it doesn't drag on the floor. Then, attach your wall to your tent's top by fastening the hook and loop fasteners onto each other.

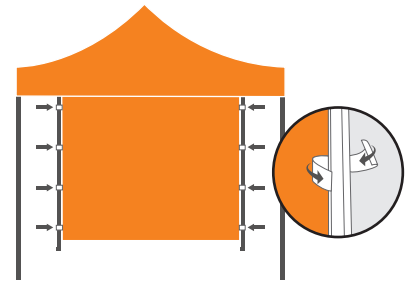


Step 3
Lastly, your polyester side walls should come with 4 hook and loop fasteners on the each side. Attach these onto the legs of the tent.

F. HOW TO TAKE DOWN YOUR TENT


Note: You do not have to remove your top after each event. If it is wet, make sure that it is fully dry before putting it away. If you need directions on how to clean it, please see section: A. How to Clean Your Tent.

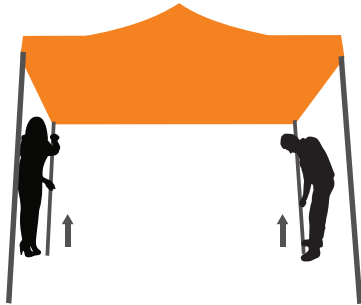

Step 1
With your friend take two of the legs, lift them up and press the push button to release the legs and allow them to slide down.

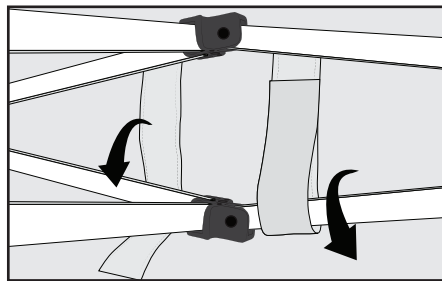

Step 2
Unfasten the hook and loops from the middle truss bars.

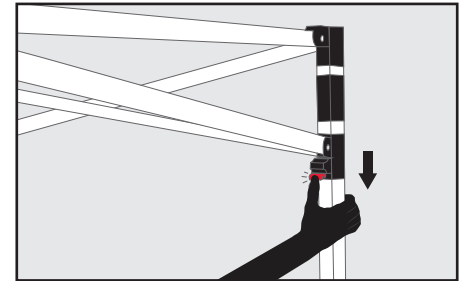

Step 3
Press the thumb-lock and allow it to slide down. Then, repeat this on all four corners.



Step 4
Grab the truss bar at the top and push up until the legs slide close enough for you to reach them.



Step 5
Grab two legs and squeeze together until the tent is closed.



Step 6
Put your tent into one of our professional roller bags or put a heavy-duty transport case over the tent and you're on your way and ready for your next event.



For More Information & Instructional Videos Visit Our Website at Instent.com/support