




**FT 052
Carter Mt.
20' x 10' x 96'' (H)**

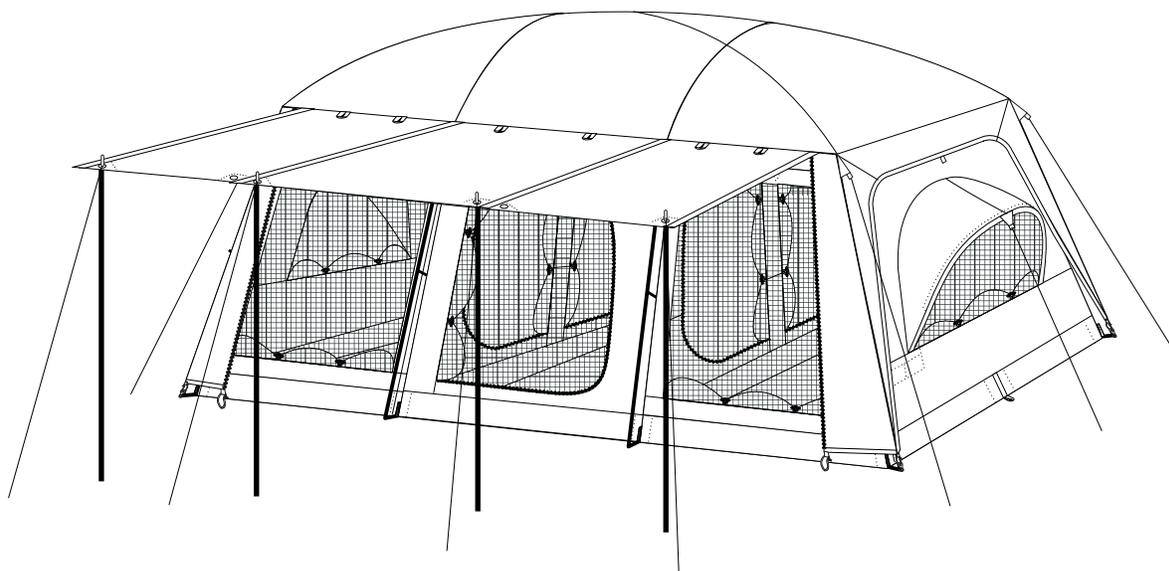

OWNER'S MANUAL

WWW.GIGATENT.COM


Assembly instructions

IMPORTANT


We advise you to assemble the tent once, before going camping to assure that all parts are present, and become familiar with the assembly of the tent.

Frame Parts


Pole Hubs

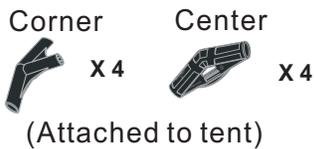

Fiberglass Poles

 



Steel Poles

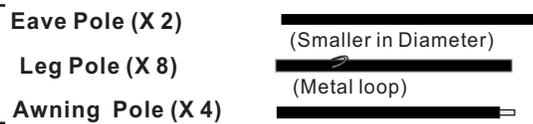

■ Step "1" tent setup


- 1) Spread the tent body out on the ground
- 2) Fully open all the poles place to one side
- 3) Carefully thread the main poles through the GREEN pole sleeve (Figure A) and then insert the cross poles into the YELLOW pole sleeves and OVER the main pole
- 4) Inset the ends of the cross pole into the center hubs (Figure B) making sure to enter them into the opening with the rims (see center pole diagram)
- 5) Insert the ends of the main poles into the corner hubs (Figure C) making sure to follow the corner pole Diagram. Attach the pole clips to the poles (Figure D)
- 6) Insert the steel eave pole into the corner hub, follow the corner pole diagram. Attach the clips to the eave poles (Figure D)
- 7) Starting at one end begin inserting the leg poles into the corner hubs (NOTE THE FRONT LEG POLES HAVE A METAL RING INTO CENTER) and insert the pin location on the ring at the bottom of the tent into the end of the poles (Figure F)
- 8) Attach the pole clips to the leg poles
- 9) Stake the tent down using the stake loops provided and the rings at the end of the poles (Figure G)

 Center Pole Diagram Corner Pole Diagram

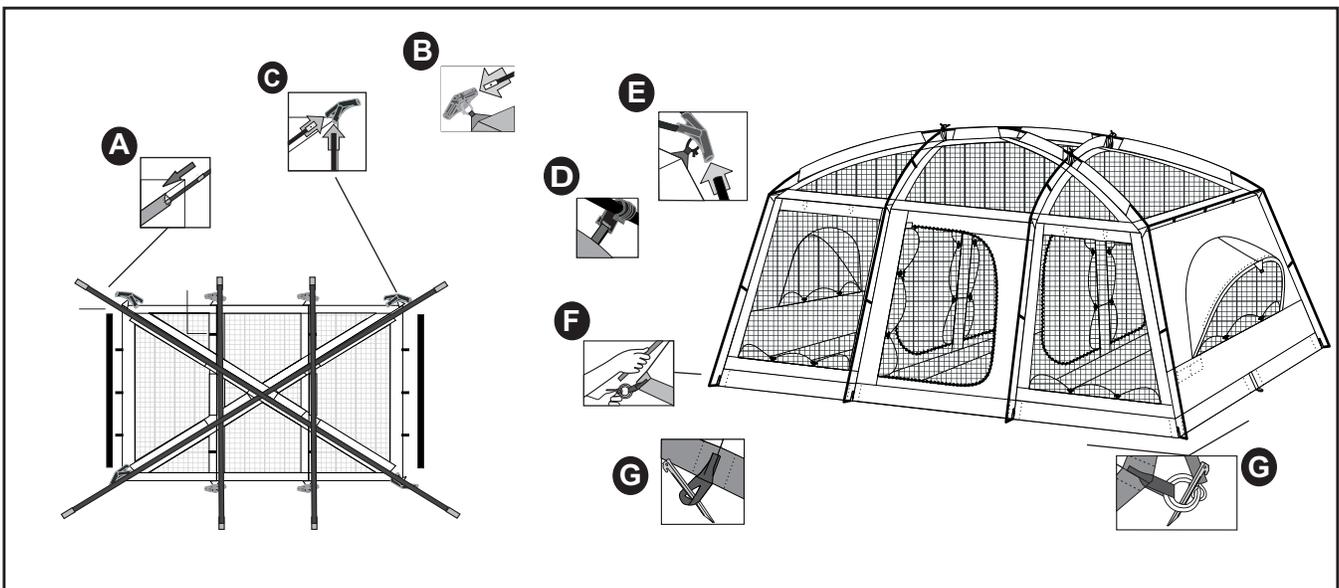


■ Step "2" attach the rainfly

- 10) Open the rain fly and insure that it is right side up.
- 11) Drape the rain fly over the tent body (this will be easier with 2 people)
- 12) Attach the Velcro located on the underside of the fly around the poles (Figure I).
- 13) Attach the bungee cords to the ring at the bottom of each pole using the hook provided (Figure K).
- 14) Stake out cantilevered windows with ropes provided (figure L below)

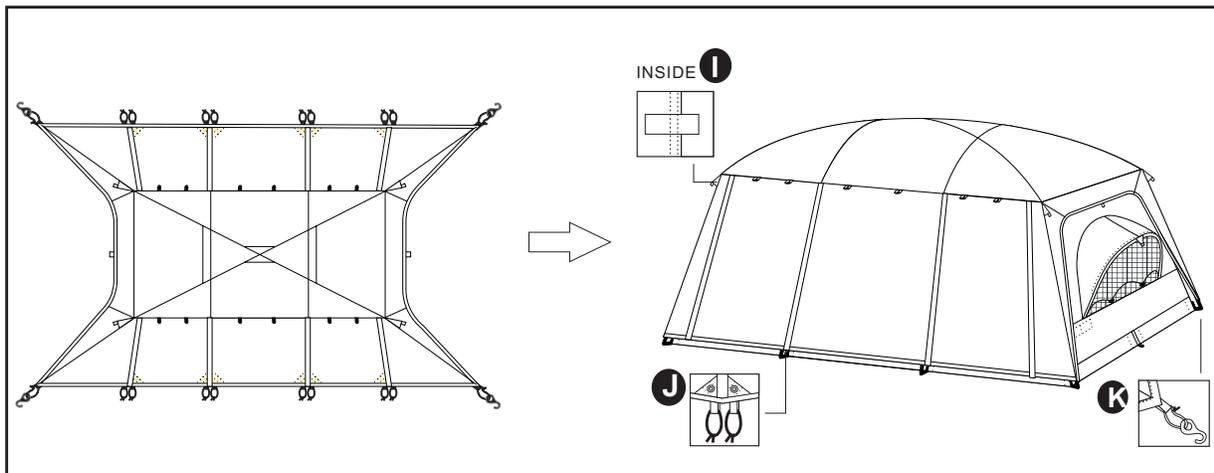


■ Step "3" Install the awning

- 16) Open the zippered flap on the fly
- 17) Tie a loop at each end of the guy robes
- 18) Fit the pins of the awning poles into the grommets at the hem of the awning
- 19) Hang the rope loop over the pole pin and stake the rope down.

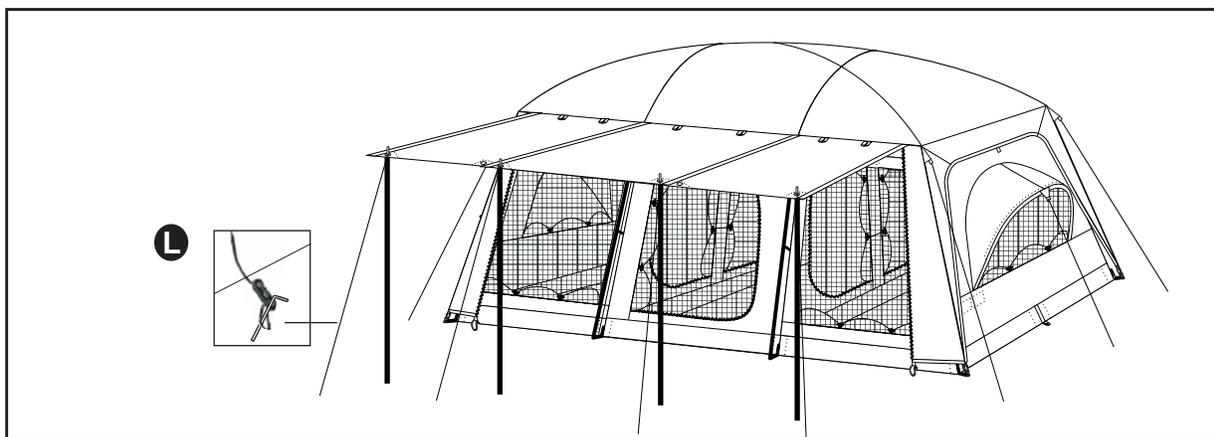

Replacement Parts

MODEL: FT 032

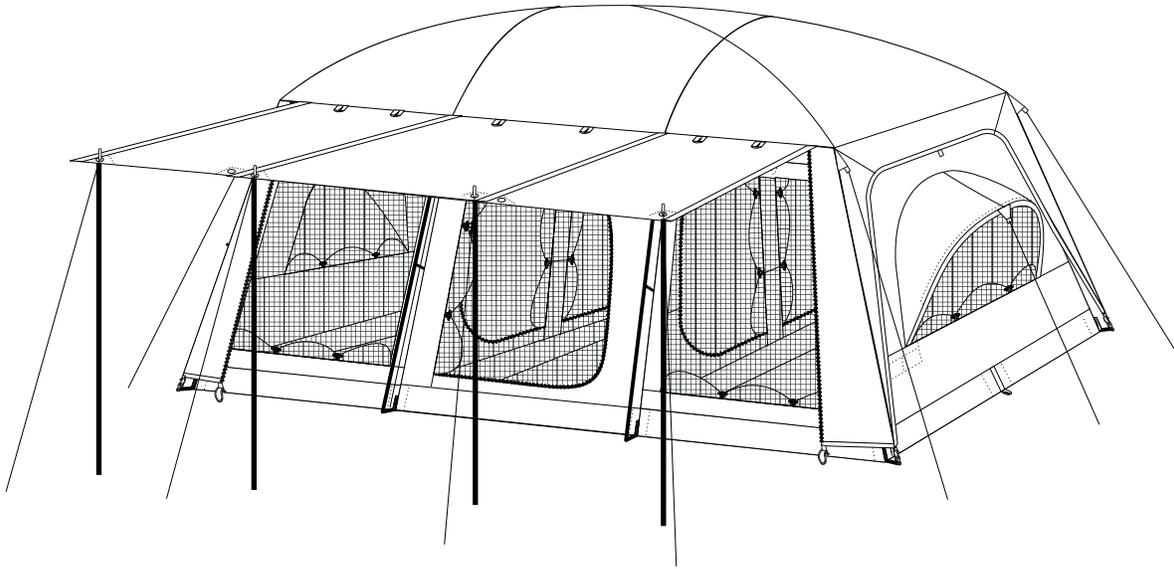

	Description	Qty.		Description	Qty.
1.	Inner Tent	1	7.	Plastic Mold	8
2.	Rainfly	1	8.	Carry Bag	1
3.	Fiberglass Pole	6	9.	Pole Bag	1
4.	Steel Pole	14	10.	Peg Bag	1
5.	Plastic Peg 9"	8	11.	Owner's Manual	1
	Steel Peg 6mm7"	20			
6.	P/string	10	12.	Box	1

*Review your parts list above; to make sure all parts listed above have been included on your package.



This product meets the flammability requirements of CPAI - 84. The fabric may burn if left in continuous contact with any flame source.

The application of any foreign substance to the product fabric, may render the flame resistant properties ineffective.

EXTREME CAUTION!

Never use any fuel burning oxygen consuming device, or any device that produce any fumes, including stoves, lanterns, candles, hibachis, or heaters in or around your product. This could result in carbon monoxide poisoning, injury and/or death.

manufactured in our state of the art factory in china



THANK YOU
 FOR PURCHASING A SUPERIOR QUALITY MY MASTERPIECE WILDCAT MOUNTAIN.
 THIS TROUBLESHOOTING GUIDE
 IS DESIGNED TO GIVE YOU YEARS OF FUN AND ENJOYMENT FROM YOUR CAMPING EQUIPMENT.

Troubleshooting Guide

PROBLEM	SOLUTION
1. CONDENSATION	This is caused by lower temperatures on the outside of the tent combined with body heat on the inside of the tent. Leave the doors and windows open to reduce condensation moisture.
2. FLOOR CONDENSATION	To prevent floor condensation use a ground cloth. Placing a ground cloth under your product will prolong its life. Ground cloth size should be slightly smaller than product floor size.
3. MILDEW	To avoid mildew, put your tent away from wet or damp. However, if mildew occurs, use a soft bristle brush or sponge with mild dish washing soap to clean. Let the tent dry in the sunlight and apply seam sealer compound on outside seams.
4. REPAIRING A TEAR	For small tears use a self-adhesive patch kit. We recommend a canvas or awning repair shop for larger tears.
5. FAULTY ZIPPER	All of our tents are manufactured with zippers, which if the zipper separates, you can fix it by moving the slider to the beginning of the zipper tape and re working the zipper, if this doesn't work, you may order a replacement zipper from our parts department. A local canvas or awning repair shop in your area may then install the zipper.
6. SEAM LEAKAGE	To protect against seam leakage, apply a generous amount of seam sealer On all interior seams.
7. REMOVING STAKES	Stake should be removed with another stake, hammer or stake puller, but never by pulling on the tent. Avoid staking the tent so tightly that it stretches the fabric, over stretching may cause stake loops to tear. Troubleshooting Guide

WARNING

WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

This tent meets the flammability requirements of CPAI - 84. The fabric may burn if left in continuous contact with any flame source.

The application of any foreign substance to the product fabric may render the flame resistant properties ineffective.

DO NOT...

1. Do not pitch tent near an open flame.
2. Do not leave campfires unattended.
3. Do not allow CHILDREN or ADULTS to use lighted candles, matches or other flame sources in or near tents.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use fuel burning/oxygen consuming

devices(i.e.heaters,lanterns,or other flame sources)inside your tent at any time.

6. Do not spray the tent with insecticide.
7. **EXTREME CAUTION:** Never use any fuel burning/oxygen consuming device, or any device that produces fumes (including stoves, lanterns, candles, hibachis, or heaters) in or around your tent. Inhalation of fumes may result in carbon monoxide poisoning, injury and/or death.

DO ...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Disassemble and store tent properly after camping to ensure the tent's longevity.
4. Always use a hammer/mallet when driving stakes into the ground.

CARE

Your tent is made of UV-Polyester fabric which is highly resistant to the sun's Ultraviolet(UV) light.

No tent can with-stand prolonged exposure to sunlight.

Sealing of Seams

Although extreme care is taken in the process of the stitching and the application of tape seaming.

The seams may require from time to time additional application of a seam sealer spray.

We do however request that all seams are treated/ sprayed annually.

On application of the spray, spray the outside seam (Ensure that you are in a ventilated area when applying)

Storage

Tents must never be rolled up or packed while damp or wet, as mildew will form within a few days.

Allow tent to dry completely before rolling up and storing away.

Structural Integrity

Although the tent is constructed to rigid specification, periods of wind and soaking rain may loosen the stakes and cause the uprights poles to loosen.

This will weaken the rigidity of the overall structure, therefore ensure that the tent storm ropes are at all times taut and correctly pegged into the ground. (This will prevent water pockets collecting in the roof, the weight of which may cause the tent poles to collapse)

WARRANTY

Warranty Term :

5 years from the date of purchase

What Is Covered:

Warrants to the original purchaser that its products are free from defects in material and workmanship.

What Is Not Covered:

Shall not be responsible for the natural breakdown of materials that occurs inevitably with extended use (e.g., Ultraviolet(UV)light damage on tents, exhausted zippers), or defects caused by accident, abuse, alteration, animal attack, storm damage, misuse or improper care.

What Will Do:

If after inspection we find that a product failed due to a manufacturing or material defect, we will repair or replace the product, at our option, without charge.

How To Obtain Warranty Service :

Return the product, freight prepaid, to the GIGA TENT Customer service department. For return authorization e-mail our office and obtain an Authorization number, Authorization numbers are valid for 30 days from the date of issuance, and must be obtained within 30 days of ship date. Returns will be handled in timely matter. Collect shipments or shipments without return authorization will not be accepted.

Repairs:

If your Product needs service or repair due to normal wear and tear, animal attack, accident or some other reason that is not covered under the warranty we will provide the necessary service for a reasonable charge, plus shipping and handling. We require that products accepted for any repair most be properly cleaned according to our recommended care instructions. Please send your product or component that requires repair (e.g. tent fly), postage prepaid, along with a description of what needs attention.

REPLACEMENT PARTS:

Replacement parts may be ordered with consumer service at 1- 877 - TENTS 01 (873-8601)

We accept Visa Master Card and American express.

• WWW.GIGATENT.COM •