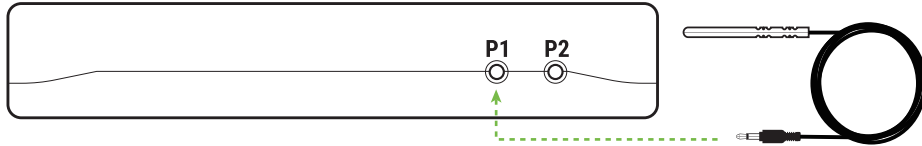# Quick Start Guide - Temperature Setting
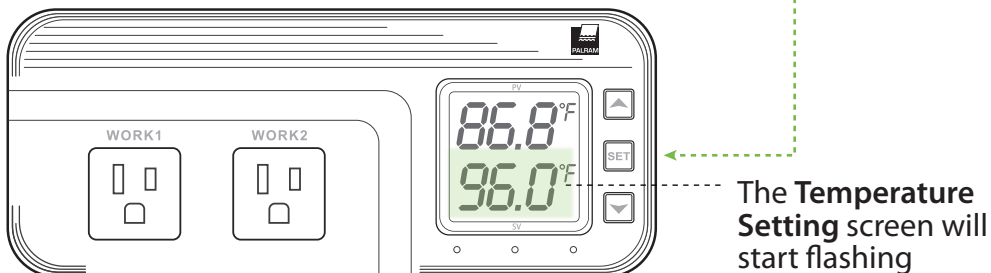
❶ Insert the Temperature **Probe** into **P1 interface**

P1   P2

❷ Insert Heater plug into **WORK1**

WORK1   WORK2

Measured ambient temperature

Targeted temperature setting

❸ Shortly press **SET** button

WORK1   WORK2

The **Temperature Setting** screen will start flashing
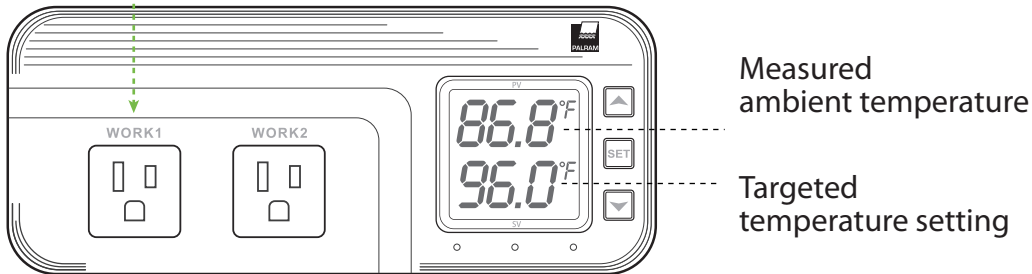
❹ Use **Arrows** to set up your Heating System to the desired temperature

WORK1   WORK2
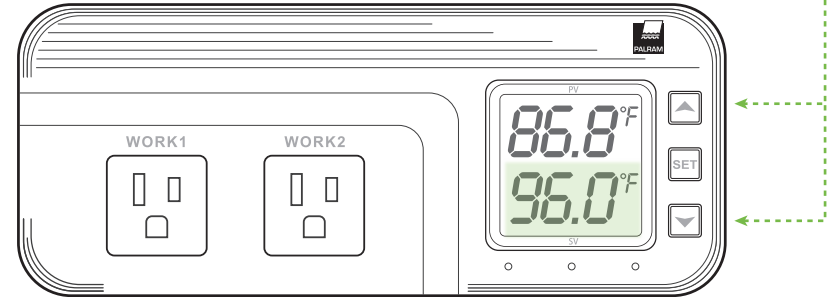
❺ Shortly press **SET** button to exit setup mode

WORK1   WORK2
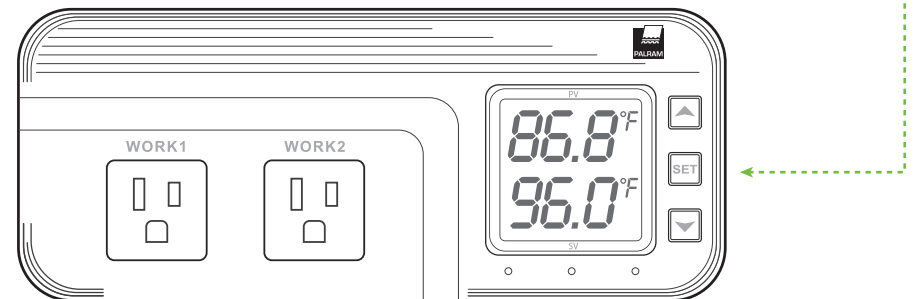
NOTE:

Your Controller features many other functions. Hold the SET button 2 seconds to access the Menu displaying all functions.

Hold the SET button 2 seconds to exit the Menu.