
Build Your Own 10'x14' Floor



2 - Treated 2"x4"x144" 2 - Treated 2"x4"x24" 12 - Treated 2"x4"x117" journal of the state of t

joist

Space these so that the 2"x4" joists are 16" apart from center to center.

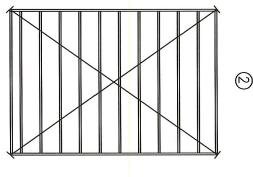

2"x4"x144"

Next measure from corner to corner. These measurements must be the same to ensure the frame is square. Once the frame is square, install the 5/8" OSB flooring.

2"x4"x24"-

2"x4"x117"

First make 2"x4" frame exactly 10' x 14'



48"×72"		48"x96" .		
24"x48"	48"×96"			48"x48"
24"x72"		24"x96"		

Lay 7 sheets of 5/8" OSB on top of frame and fasten.

