

Pre-cut Value Gambrel 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL



4' Value Gambrel



6' Value Gambrel

Sizes: 8'x8', 8'x10', 8'x12', 8'x14', 8'x16', 10'x10', 10'x12', 10'x14', 10'x16', 10'x18',
10'x20', 12'x12', 12'x14', 12'x16', 12'x18', 12'x20', 12'x24'

Tools Needed:

- Cordless Drill (12V or Higher)
- #2 Square Drive Bit
- Hammer
- 6' Step Ladder
- Tape Measure
- Square Utility Knife
With Blade & Hook Blade
- Speed Square



LITTLE COTTAGE CO.
PO Box 455, Berlin, OH 44610 • 330-893-4212 • www.cottagekits.com



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



1. Thank you for purchasing from Little Cottage Company! If you have any questions during construction please call us at 330-893-4212. You will find all components necessary to complete your storage shed. Refer to your buy list for specific contents which will vary by unit.



2. Locate your rim boards and floor joist, layout as shown.



3. Start at the corner and use the speed square to make sure the corner is flush and fasten with 3" nails.



4. Next square up the floor. To square the floor, use a tape measure to find the distance from one corner to the other, then measure the diagonal between the remaining 2 corners. If the two measurements are the same, then your floor is already squared. If they aren't, adjust the the floor until the measurements are the same.



5. Set OSB sheathing in place, using the speed square, make sure the OSB is flush with the 2x4 on both sides.



6. Secure the OSB sheathing in place by fastening it with 2" nails to the 2x4's every 6-8 inches.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



7. Using the WALL LAYOUT DIAGRAM sheet. Locate the 2x4 studs for the wall section and layout as shown.



8. To create the interior wall, fasten the 2x4 studs with 3" nails, in between the 2x4 top & bottom plates



9. Next locate the Smartside Siding. Place the siding on top of the 2x4 studs as shown, making sure the top, and sides, are flush. Secure it with 2" nails.



10. Always fasten the top first and keep flush with the 2x4 top plate.



11. Continue installing Smartside siding. There will be a 3" skirt at the bottom.



12. Next install 7/16 OSB top plate as shown.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



13. Make sure the OSB top plate is flush on the bottom side (inside of wall), and the side.



14. Lay wall off to the side as shown.



15. Build the next wall as shown.



16. Continue installing Smartside siding, making sure all is flush.



17. Make sure that you always fasten the top first and keep flush with the 2x4 top plate.



18. Continue installing the Smartside siding.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



19. Install the 7/16 OSB as shown. Making sure the OSB top plate is flush on the bottom side (inside of wall), and side.



20. Lay wall off to the side as shown.



21. Using the WALL LAYOUT DIAGRAM sheet. Locate the back wall plates, and studs, and lay them out as shown in the diagram.



22. Fasten the wall plates and studs together with 3" nails, as shown.



23. Using the WALL LAYOUT DIAGRAM sheet.. Locate the truss pieces. Match truss A, B, and C. Secure with 3" nails.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



24. Temporarily install the piece of 7/16 x 3 1/2 x 20 OSB to the top plate. Measure out 5 1/2" from the edge of the top plate as shown, and fasten.



25. Fasten the truss to the temporary piece of OSB, with a 1 1/4" blackheaded screw as shown, repeat on the other side.



26. Now it is ready for gable studs. *Refer to your WALL DIAGRAM Sheet for your particular layout.




27. Place the gable studs and fasten with 3" nails.



28. Continue with gable studs, secure with 3" nails.



29. Next, install the Smartside siding. Place the siding 3" down from the bottom plate and 3 1/2" over from the side of the bottom plate.

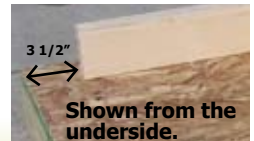



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



30. Measure 3 1/2" out from the edge of the 2x4 plate and secure with 2" nails.



31. Next layout 2x4's, as shown for the door wall. See wall layout for correct measurements.



32. Secure 2x4 plates as shown with 3" nails. Make sure it is flush.



33. Continue fastening the wall.



34. Install the 2x4 with notch, on top of the header. Secure with 3" nails.



35. Temporarily install the piece of 7 1/6" x 3 1/2" x 20" OSB to the 2x4 that is attached to the middle of door, as shown. Measure out 5 1/2" and fasten with 1 1/4" blackheaded screws. Repeat on other side.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



36. Now locate the rafter. See the WALL LAYOUT DIAGRAM sheet to match truss A, B, and C. Secure with 3" nails.




37. Next place the truss as shown and fasten with 1 1/4" blackheaded screw.




38. Make sure the truss is flush on top and outside with the OSB before fastening.



39. Nail the truss on top of the 2x4 where notched.

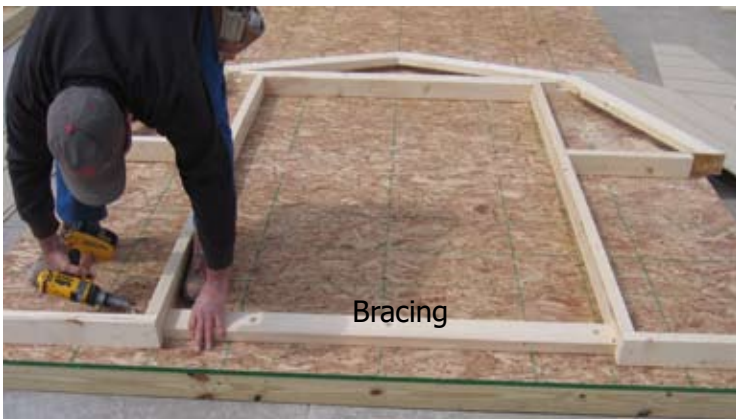

40. Install 48" or 60" (depending on door width) 2x4's, flat, for temporary bracing. Secure with 2 1/2" screws.

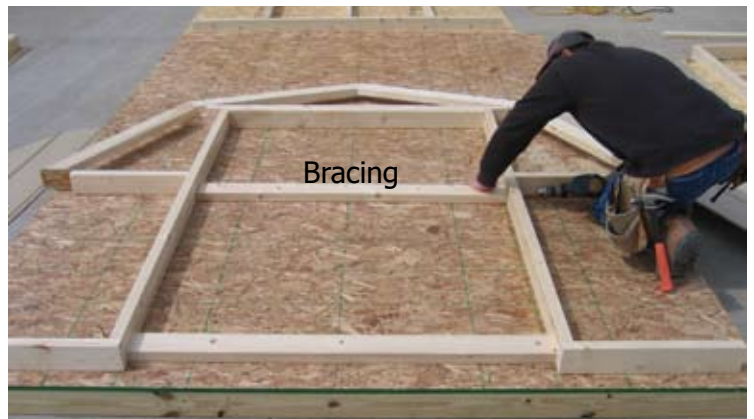

41. Continue with bracing.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



42. Next install Smartside siding. Make sure it is flush on the inside and measures 3" from the plate on the bottom as shown.



43. Measure 3" from bottom of 2x4, as shown, and secure panel with 2" nails.



44. Make sure the Smartside is flush on the inside of the 2x4 as shown and secure with 2" nails.



45. Install the top section of Smart side.



46. Continue with siding and secure with 2" nails.



47. Continue as shown. Fasten Smartside 8" on center.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



48. Next install the door stops and keep flush with the top of the 2x4 (not Smartside) and secure with 2" nails.



49. Install the 2 3/4" trim around the door and secure with 2" nails.



50. Install the trim block in the center of the header, and secure with 2" nails.



51. For rake installation, measure 2 1/2" from the edge of the Smartside, and mark with pencil, as shown.



52. Do the same as pictured before.



53. Now install the 2x3 rake. Install at 2 1/2" marks so the 2x3 will be flush with the 7/16 OSB roof sheathing once installed.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



54. Make sure the rakes are all installed and fastened with 3" nails.



55. Remove 2x4 brace. Top and bottom.



56. Remove 7/16 x 3 1/2 x 20 OSB.



57. Lay wall off to the side.



58. Next locate all truss parts, and using the previously assembled gable truss, as a template, layout the trusses.



59. Install OSB gussets, as shown, and secure with 2" nails to start truss assembly.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



60. Continue installing OSB gussets. See diagram for more information.



61. Pickup the truss, as shown, and flip it over, to attach the OSB gussets on the opposite side.



62. Lay truss in place.



63. Now install OSB gussets on opposite site, using the 2" nails to finish truss assembly.



64. Continue assembling trusses till all trusses are complete.



65. Using the WALL LAYOUT DIAGRAM sheet, install the wall, and fasten with 3" nails.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



66. Fasten opposite end same as last picture.



67. Continue with walls.



68. Next install gable wall.



69. Make sure the walls fit nice and tight and fasten with 2" nails every 8".



70. Fasten the bottom with 2" nails every 8 inches.



71. Install the front gable.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



72. Fasten with 2" nails every 8".



73. Make sure you have 48" or 60" (depending on building width) in between the door opening, 48" on 8' wide buildings and 60" on 10' and wider buildings.



74. Install kick plate. Keep flush with top of floor and fasten with 2" nails.



75. Locate the temporary wall braces.



76. Space wall braces according to width of the building and attach with 2 1/2" screws.



77. The temporary wall brace will be removed when building assembly is completed.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



78. Hang trusses on the walls.



79. Install trusses, as shown, making sure they are 24" on center before fastening.



80. Secure with 3" nails where marked. Put a nail on each side and on the front.



81. Locate OSB sheathing for the roofing.



82. Install the first piece of sheathing as shown.



83. Secure the outside corner with 2" nails.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



84. Secure with 2" nails as shown.



85. Make sure the trusses are 24" on center before fastening.



86. Now fasten the top outside corner.



87. Continue with OSB Sheeting and fasten every 6" to 8" with 2" nails.



88. Continue with OSB...



89. Fasten with 2" nails.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



90. Continue with sheathing.



91. Continue with the sheathing.



92. Next install aluminum corners and secure with 2" nails.



93. For door installation, you will be using three hinges, per side. Use one 2 1/2" blackheaded screw, per hinge. Fill the remaining screw holes with 1 1/4" screws. This is done for both sides.



94. Fasten the hinges on the top, middle and bottom.



95. Install the barrel bolt, using 1 1/4" screws, on the inside of the left hand door (facing).



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



96. Then install the barrel bolt at the top of the door.



97. Use your hammer to tap on the barrel bolt to locate the mark.



98. Do the same for the top.



99. Now use your 5/16" drill bit to drill the hole.



100. Again, do the same for the top.



101. Now install the latch on the door.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



102. Continue with the latch.



103. Next you are going to install the drip edge. This will be fastened with 3/4" nails.



104. Fasten with 3/4" nails about every 12" along the entire edge of the building.



105. As you secure the drip edge, you will need to snip the drip edge to allow it to bend along the ridge.



106. Continue to install the drip edge.



107. Now, snap a chalk line along the OSB consistent with the width of the starter strip. Consult the instructions provided with your shingle package.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



108. Align the top of the starter shingles with the chalk line and attach.



109. Continue as shown.



110. Continue to install shingles in a staggered fashion.



111. Continue attaching shingles to the top of the roof section, staggering as shown.



112. Cut the ridge cap as shown and start to place the cap on the top of the building.



113. Continue with ridge caps as shown.



Pre-cut Value Gambrel - 4' & 6' Sidewalls ASSEMBLY INSTRUCTION MANUAL

PLEASE NOTE: A 4' SIDEWALL UNIT WAS USED FOR PICTURES SHOWN



114. Complete caps as shown.



115. Your finished product!
(Shown above in the 4' sidewall)

**Thank You For Purchasing From Little Cottage Co.
ENJOY!**