


DOOR CANOPY **ina** BOXTM by SUNSATONAL PRODUCTS[®]

Instructions for the 4', 6' and 8' Door Canopy in a Box[®]

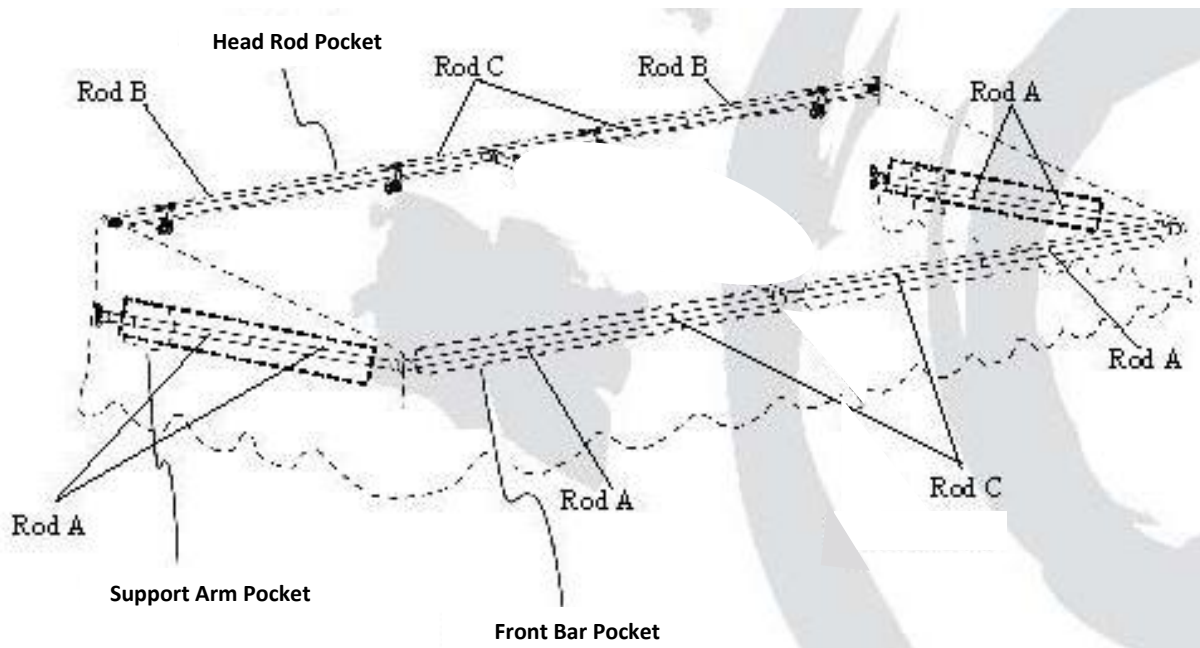

Pictured in above diagram is the 8' Traditional Door Canopy in a Box[®]

DOOR CANOPY

by SUNSATONAL PRODUCTS®




Thank you for purchase!
Please read and follow the below instructions.

Internal Connector 1200720

QTY

- 4 foot requires – 4
- 6 foot requires – 6
- 8 foot requires – 8

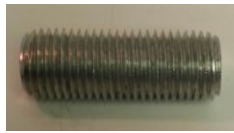

Camelback Hinge 1200144

QTY

- 4 foot requires – 2
- 6 foot requires – 2
- 8 foot requires – 2



#10 Wood Screw 1200093

QTY

- 4 foot requires – 8
- 6 foot requires – 10
- 8 foot requires – 12



Head Rod Clamp 1200145

QTY

- 4 foot requires – 2
- 6 foot requires – 3
- 8 foot requires – 4



Canopy Fabric

QTY

- 4 foot requires – 1
- 6 foot requires – 1
- 8 foot requires – 1




Part number varies by size, style & color

Rod A 1300225

QTY


- 4 foot requires – 6
- 6 foot requires – 6
- 8 foot requires – 6

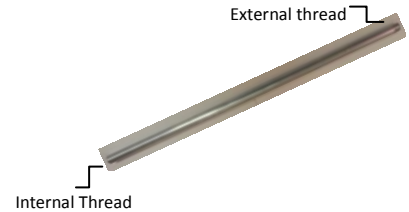

Rod B 1300222

QTY


- 4 foot requires – 2
- 6 foot requires – 2
- 8 foot requires – 2

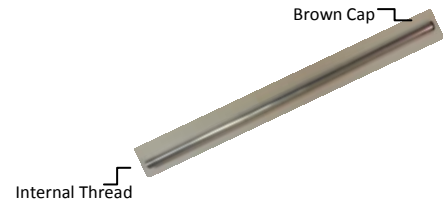

Rod C 1300223

QTY

- 4 foot requires – 0
- 6 foot requires – 2
- 8 foot requires – 4

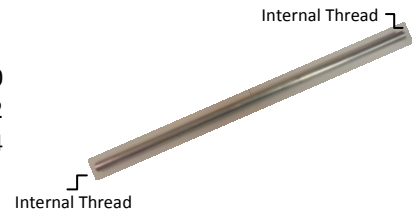

Elbow 1200147

QTY

- 4 foot requires – 2
- 6 foot requires – 2
- 8 foot requires – 2



Eye End 1200148

QTY

- 4 foot requires – 2
- 6 foot requires – 2
- 8 foot requires – 2



READ FIRST!!

If you are unsure about the construction of the building that the canopy will be attached to, or are unfamiliar with the tools listed below, consult a professional installer or licensed contractor for further assistance. Sunsational Products cannot provide assistance with building construction identification. Compliance with local building codes, permits, or licensing requirements are the sole responsibility of the purchaser. Also the purchaser assumes complete and sole responsibility for any and all risk, liability, bodily damage or injury, structural damage, consequential damage, by installing or having installed any product from Sunsational Products, and further releases Sunsational Product, its parent corporation, resellers, and agent any responsibility from afore mentioned risks and liabilities. Additionally, Sunsational Products makes no warranties beyond those stated in the warranty section, so please read carefully.

TOOLS REQUIRED

Gather required tools: Tape Measure, 2" foot bubble level, drill motor, drill bits (pilot hole for supplied #10 wood screw | softwood=3/32" | hardwood=7/64"), masonry anchors (follow manufactures installation instruction for required hammer drill and appropriate size masonry bit ensuring anchor will accommodate #10 screw and support weight of Door Canopy), ladder or step stool, flat head and Phillips head screw drivers, pencil small adjustable wrench, waterproof caulking suitable for exterior use on your particular buildings material, stud finder (for finding structural stud work behind fascia board or siding), masking tape (for damage prone surfaces such as aluminum siding), and most important an able bodied assistant to provide help in the various stages of installation.

INSTALLATION INSTRUCTIONS

- 1) Assemble head rod sections by joining:
Rod B to Rod B for the 4 foot Door Canopy
Rod B to Rod C to Rod B for the 6 foot Door Canopy
Rod B to Rod C to Rod C to Rod B for the 8 foot Door Canopy
Using the internal thread connector



- 2) Insert head rod into head rod pocket of canopy, slide head rod to the opposite end of the canopy until it is visible out of pocket.




- 3) Assemble front bar sections by joining:
Rod A to Rod A for the 4 foot Door Canopy
Rod A to Rod C to Rod A for the 6 foot Door Canopy
Rod A to Rod C to Rod C to Rod A for the 8 foot Door Canopy
Using the internal thread connector

- 4) Similar to head rod. Insert front bar into front bar pocket of canopy, slide front bar to the opposite end of the canopy until it is visible out of pocket. Attach elbows to exposed ends of the front bar.




- 5) Assemble Arm Pipe by joining Rod A to Rod A with the internal thread connector. Attach one Eye End to the end. Slide completed arms into side pocket of canopy with externally threaded end towards elbow of front bar. Thread arm into elbow. Repeat for opposite side of canopy.

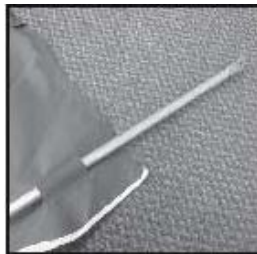

- 6) Attach Camelback Hinges to Eye Ends temporarily using hinge screw.



- 7) Have assistant lift canopy off of ground until normal shape is achieved. Attach head rod clamps approximately four (4") inches in from each end of head rod. Then attach remaining head rod clamps evenly spaced. Straighten head rod clamps so that mounting surface is parallel to wall. Ensure head rod clamps clamp around fabric and head rod.

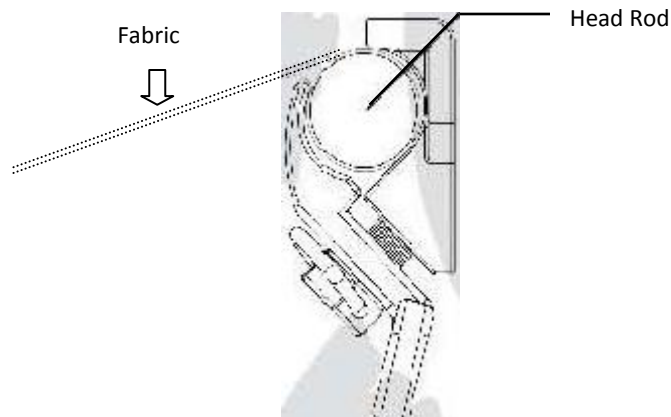

- 8) Have assistant lift canopy from underneath by the head rod until desired mounting location above door or opening is reached. Use a stool or ladder, if required.
- 9) Using a level held against the head rod, verify that the canopy assembly is level & centered over door or opening. Also check that when the arms are pulled down (provide a slight amount of tension) have a suitable mounting location and does not interfere with door operation or any nearby objects. Adjust if necessary.
- 10) Using a pencil, trace around head rod clamps to provide guide later on for marking drill locations. Consider both height and spacing when tracing as you will later realign head rod clamps to this tracing to mark obscured mounting holes.
- 11) Place canopy aside and remove head rod clamps. Realign head rod clamps with tracing marks made previously on wall. Use level again to ensure all clamps will be level with respect to each other. Then mark with pencil thru mounting holes onto wall. As this will be the final location, you may wish to re-check all measurements and mounting locations before drilling. Making sure canopy is level and centered above door or opening, arms are pulled down to place slight amount of tension on canopy and sides of canopy are vertical and are horizontally even with respect to each other. Make sure all parts of canopy are clear of opening doors or tall persons passing thru doorway, including any other obstructions nearby. **Take your time, measure twice and drill once.**

- 12) After you have checked all above items, carefully drill pilot or anchor holes. Remembering to follow any manufacturer instructions if using anchors.



- 13) After drilling pilot holes or anchor holes (following manufacturers installation instructions), attach head rod clamps to wall ensuring a secure, wobble free connection is made and clamps are level.



- 14) Re-attach door canopy to head rod clamps. Making sure canopy is centered over door.
- 15) Pull down slightly on arms to straighten fabric, making sure sides of canopy are vertical and free from obstructing surrounding objects and doors. Hold the camelback hinge against wall. Mark thru each mounting hole onto wall. Have assistant hold each arm up and away from area you just marked.
- 16) Drill pilot or anchor holes for each camelback hinge.
- 17) Remove camelback hinge from eye end. Fasten camelback hinge to wall. Re-attach arm eye ends to mounted camelback hinges.
- 18) Step back; enjoy the efforts of your work! If the canopy fabric has twisted under the head rod clamps, simply loosen head rod clamps slightly and re-adjust fabric for best appearance. Then re-tighten clamps. Also a slight side to side adjustment can be made at this time.

PRODUCT CARE

We use only quality fabrics in the manufacture of our products but fabrics do have a few limitations; therefore proper care of your canopy is important to extend its life.

- Clean canopy fabric with a mild soap solution as needed (recommended every 6 months) rinse thoroughly with water and allow to air dry. A fabric UV Protector is recommended to increase life expectancy.
- Keep the underside of your canopy clean by brushing with a household broom.
- Remove canopy during adverse weather conditions including extremely windy, rainy or snowy weather to avoid damage to the awning. Failure to do so will void the warranty.
- It's advisable to remove your awning in the winter to increase its life expectancy. Store canopy in a dry area. DO NOT store in a non-breathable plastic bag.

THE DONT'S

- Don't spray insect repellent over fabric, some solutions may cause staining.
- Don't permit leaves, twigs, and pine needles to accumulate and remain on the canopy.
- Don't drag on abrasive surfaces.
- Don't wash with abrasive cleaners, bleach or strong harsh solutions.

WARRANTY

Fabric – 1 Year Limited Warranty against manufacturer's defects in the fabric or sewing

Frame Hardware – 1 Year Warranty

Warranties apply for 1 year from date of original purchase with proof of purchase (original receipt).